


BOREALIS DIAMOND *assembly instructions*

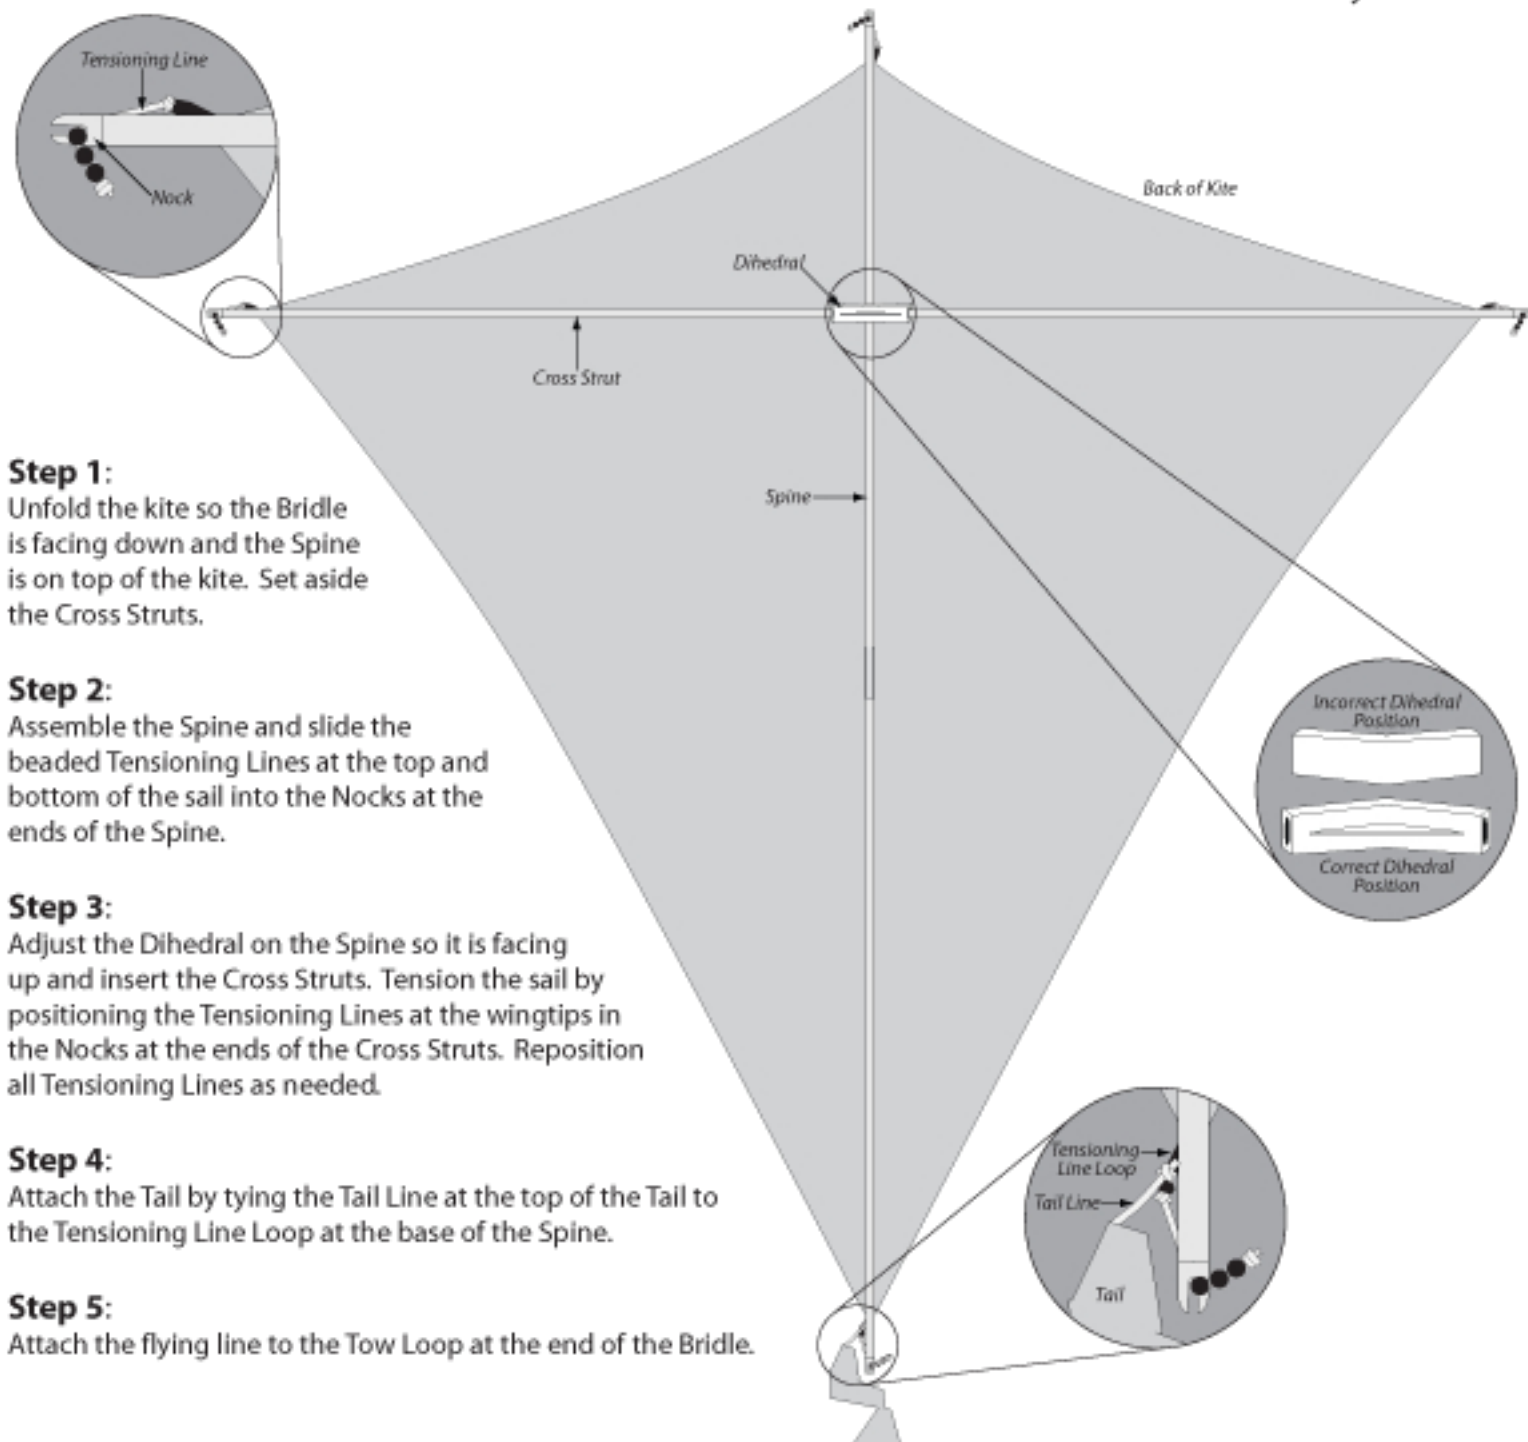

Step 1:
 Unfold the kite so the Bridle is facing down and the Spine is on top of the kite. Set aside the Cross Struts.

Step 2:
 Assemble the Spine and slide the beaded Tensioning Lines at the top and bottom of the sail into the Nocks at the ends of the Spine.

Step 3:
 Adjust the Dihedral on the Spine so it is facing up and insert the Cross Struts. Tension the sail by positioning the Tensioning Lines at the wingtips in the Nocks at the ends of the Cross Struts. Reposition all Tensioning Lines as needed.

Step 4:
 Attach the Tail by tying the Tail Line at the top of the Tail to the Tensioning Line Loop at the base of the Spine.

Step 5:
 Attach the flying line to the Tow Loop at the end of the Bridle.

To Fly: Have a friend stand about 75 ft. downwind from you and hold the kite with its Leading Edge pointed towards the sky. As the wind catches the kite, signal your friend to release it while you bring in the line with long steady pulls. Slowly let out more line as the kite flies upward.

OPTIMUM WIND CONDITIONS FOR BOREALIS DIAMOND

RECOMMENDED LINE: 30 LB TEST LINE

BEAUFORT SCALE	CALM	LIGHT AIR	LIGHT BREEZE	GENTLE BREEZE	MODERATE BREEZE	FRESH BREEZE	STRONG BREEZE
WIND (M.P.H.)	0	1-3	4-6	8-12	14-18	20-24	25-30
BOREALIS DIAMOND							

Note: Wind conditions aloft may vary considerably from those found near ground level.