

CRAYON AND PENCIL KITE assembly instructions

Step 1:

Remove your kite from the package and lay it on the ground, letter side down.

Step 2:

Loosen the velcro tab at the tip, thread the other center spar through the sleeves and into the pocket. Connect the center spars together at the ferrule.

Step 3:


Push the center spar upward so the kite sail is tight and close the velcro tab.

Step 4:

Attach all five bow lines by threading the clasp through its loop, then close the clasp.

Step 5:

Attach your flying line to the loop on the bridle. Remember to tie the line tightly.

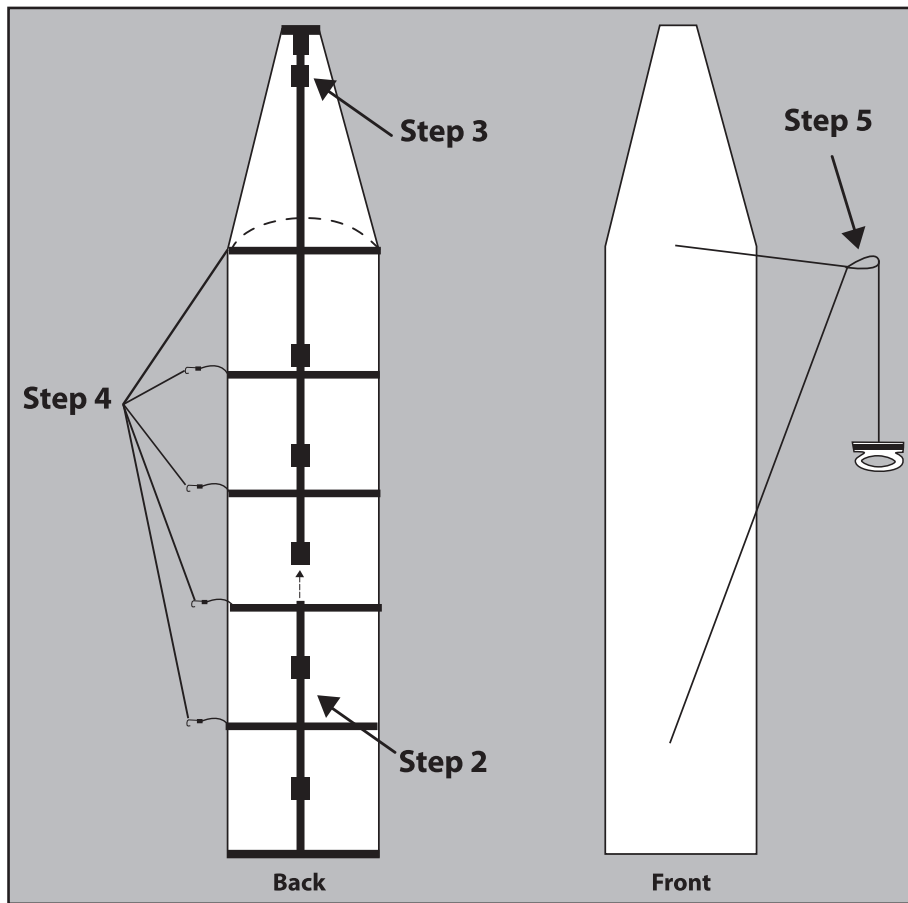

FLIGHT INSTRUCTIONS:

- Attach flying line to Tow Loop.
- Have a friend stand about 75 ft. downwind from you and hold the kite with its Leading Edge pointed towards the sky.
- As the wind catches the kite, signal your friend to release it while you bring in the line with long steady pulls.
- Slowly let out more line as the kite flies upward.

OPTIMUM WIND CONDITIONS FOR CRAYON AND PENCIL

BEAUFORT SCALE	CALM	LIGHT AIR	LIGHT BREEZE	GENTLE BREEZE	MODERATE BREEZE	FRESH BREEZE	STRONG BREEZE
[M.P.H.]	0	1 2 3	4 5 6 7	8 9 10 11 12	13 14 15 16 17 18	19 20 21 22 23 24	25 26 27 28 29 30
WIND	smoke rises vertically	Direction of wind shown by smoke, but not by wind vanes	Wind felt on face, leaves rustle, ordinary vane moves	Leaves and small twigs in constant motion; wind extends light flag	Raises dust and loose paper; small branches move	Small trees & leaves begin to sway; crested wavelets form on inland water	Large branches in motion; utility wire whistle; windows rattle
			Crayon and Pencil				

Note: Wind conditions aloft may vary considerably from those found near ground level.