

# Assembly Instructions:

1. Remove the cotter pin from the end cap and remove the end cap from the spinner axle.
2. Slide the small wheel into the center of the big wheel.
3. Thread the axle through the wheel hubs, spacers and washers per the diagram.
4. Slide the Cotter Pin through the hole in end cap and the hole in axle. Bend the ends outward to secure in place.
5. Push the ground stake into the ground.
6. Join upper and lower support poles and slide lower pole into the ground stake.

