


Step 1

Slide the long side of the Spinner Axle through the Frame. The ends of the Axle should be equally far from the WhirliGig Body. (Diagram A)


Step 2

Connect the feet by inserting the strut end of one Foot into the ferrule end of the opposing Foot. Tighten thumbscrew to secure foot into ferrule. Do not over tighten. Repeat for other feet. (Diagram B)

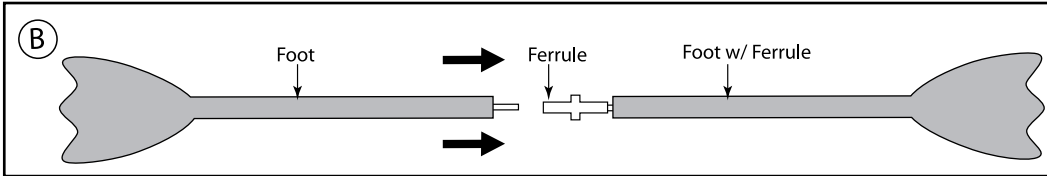

Step 3

Set the Spacer, two Washers and one spinner set aside. Slide one Washer onto the side of the Axle with the Stops. Decide which way you want the arms or wings to face and slide one set onto the Axle followed by the remaining Washer. Carefully pound the End Cap onto the Axle. Repeat with the remaining parts on the other side of the Axle, making sure to place the Spacer closest to the WhirliGig Body. (Diagrams C & D)


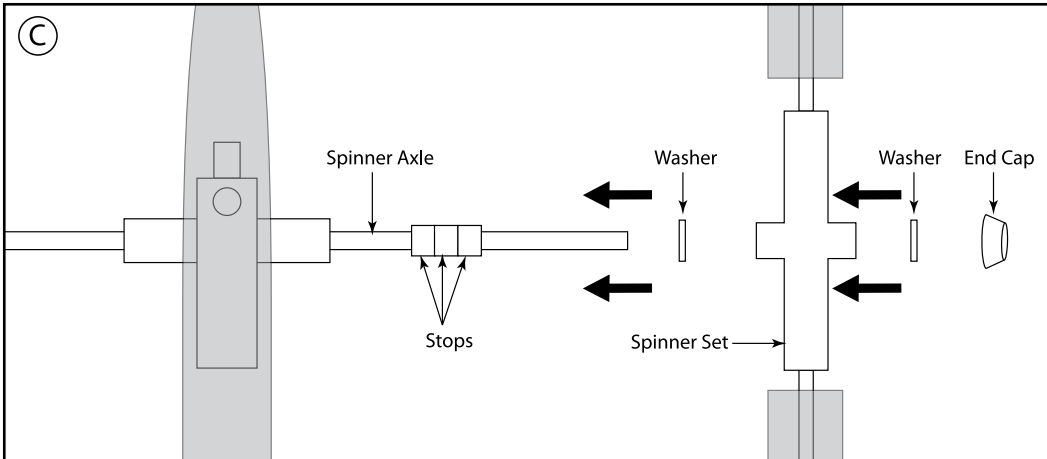


Step 4

Slide the narrow, plastic tipped end of the Upper Support Pole into the Star Lock Hub. Push down on the hub until the Support Pole locks into place and can not be removed. (Diagram D)

Step 5

Drive Ground Stake into ground and insert the non-ferruled end of the Lower Support Pole. Insert the Upper Support Pole of assembled WhirliGig Spinner into the ferrule. (Diagram E)

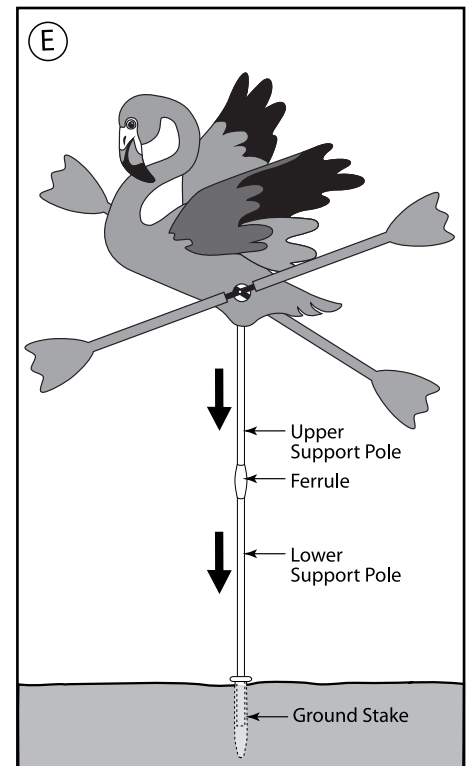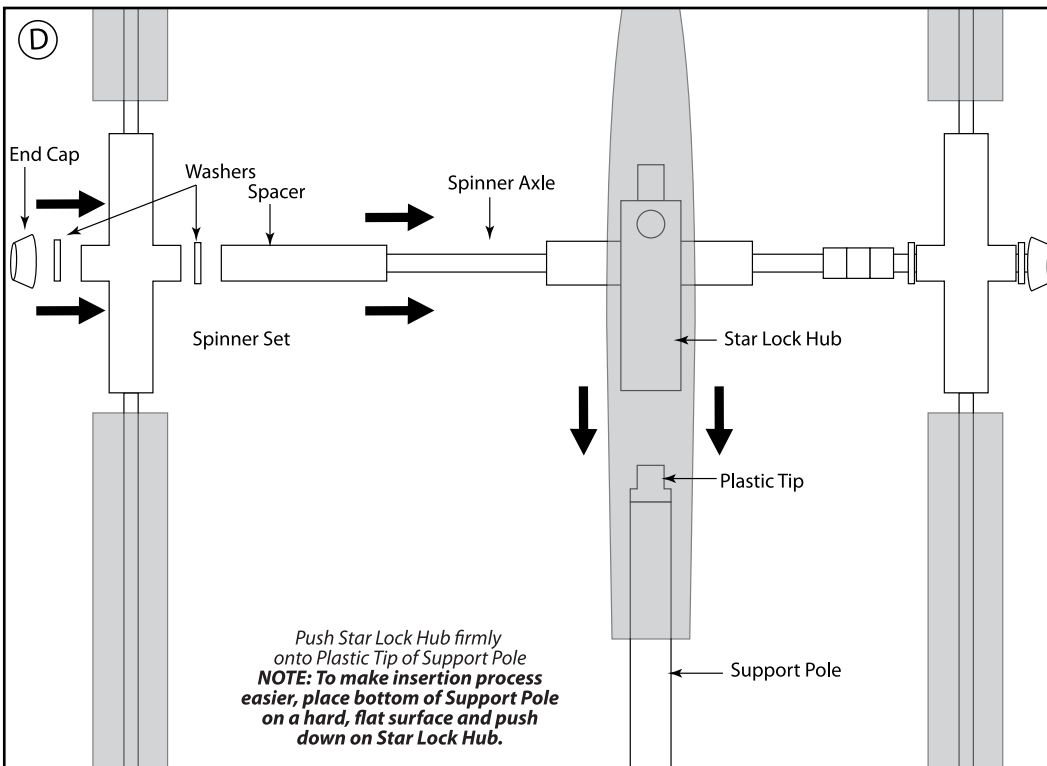

PLEASE NOTE: It is recommended that you take your WhirliGig Spinner inside during storms and harsh weather to preserve its durability.