


Step 1

Slide the long end of the Spinner Axle through the Axle Opening in the WhirliGig Body on the same side as the Velcro Tab. Open the Velcro Tab and guide the Axle through the Hub inside the WhirliGig Body. Slide the Axle as far as possible until the first Stop reaches the Hub. This should make the ends of the Axle equally far from the WhirliGig Body. (Diagram A)

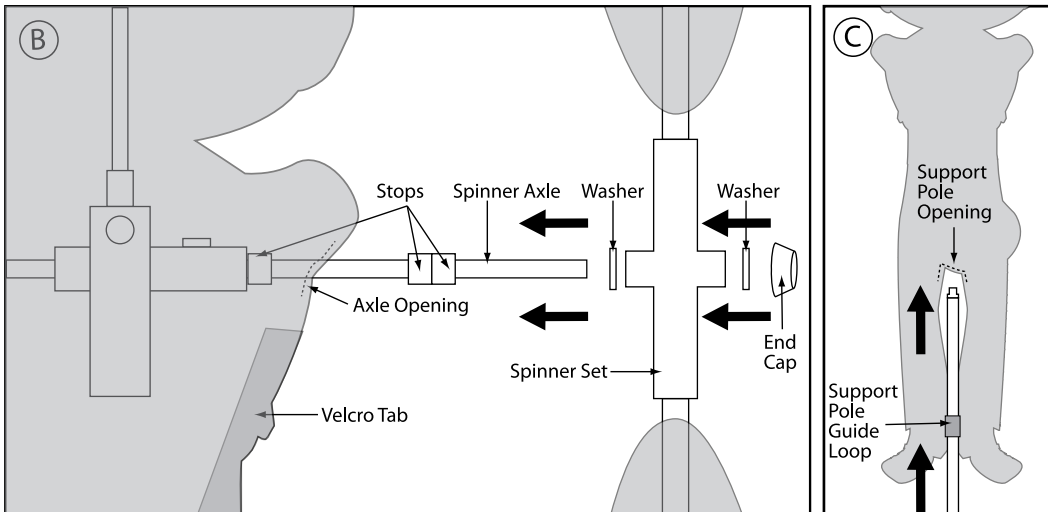


Step 2

Set the Spacer, two Washers and one spinner set aside. Slide one Washer onto the side of the Axle with the Stops. Slide one set of arms onto the Axle followed by the remaining Washer. Carefully pound the End Cap onto the Axle. Repeat with the remaining parts on the other side of the Axle, making sure to place the Spacer closest to the WhirliGig Body. (Diagrams B & D)


Step 3

Guide the Support pole through the loop at the bottom of the legs and through the Support Pole Opening inside the Body Sleeve. Slide the narrow, plastic tipped end of the Support Pole into the Star Lock Hub. Push down on the hub until the Support Pole locks into place and can not be removed. (Diagram C and D)

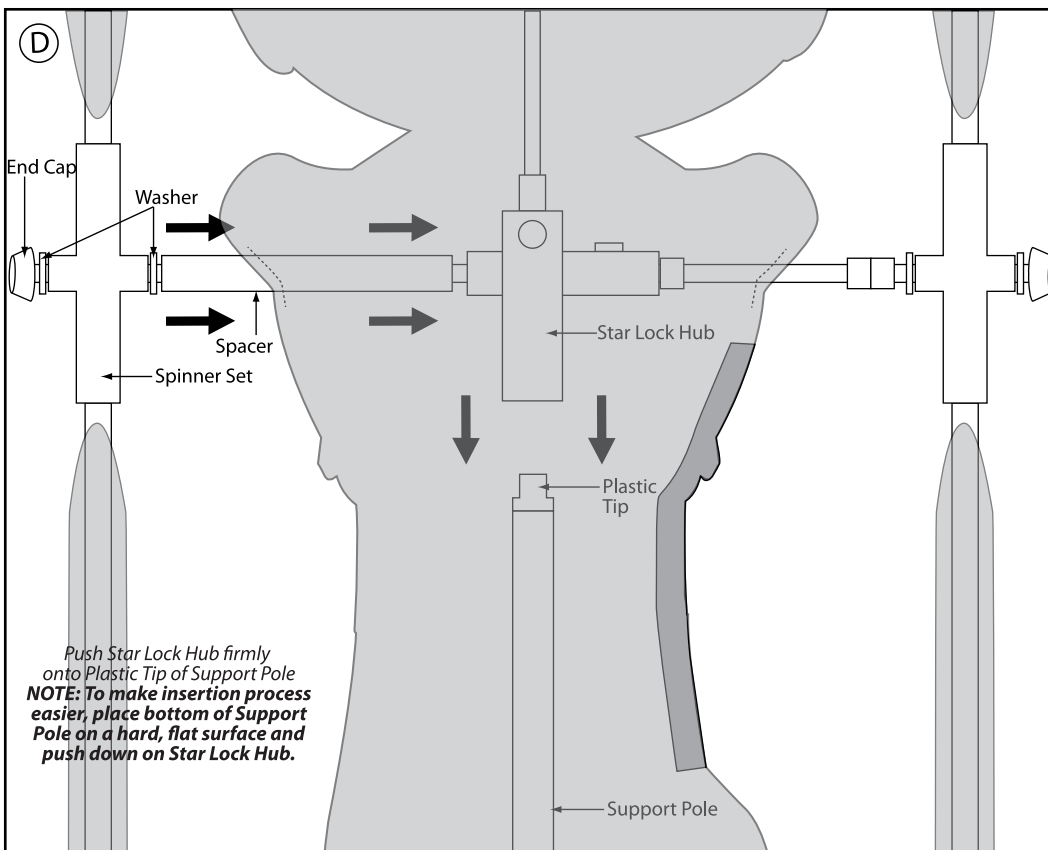

Step 4

Drive Ground Stake into ground and insert the Support Pole of assembled WhirliGig Spinner into the ground stake. (Diagram E)

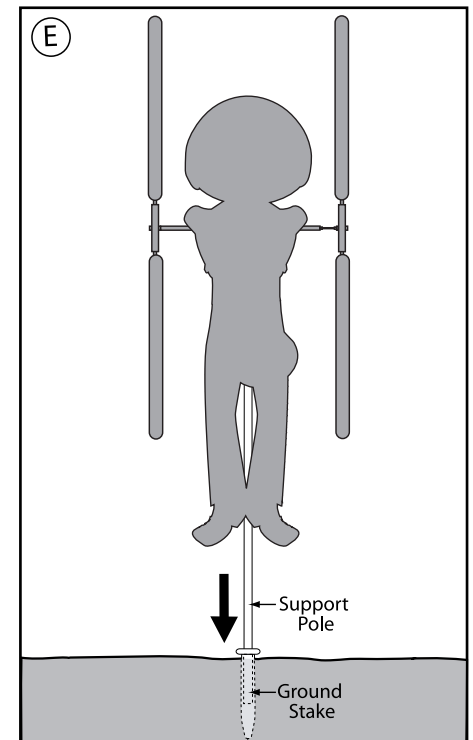

PLEASE NOTE: It is recommended that you take your WhirliGig Spinner inside during storms and harsh weather to preserve its durability.