



### Step 1

Remove Cotter Pin and slide Bushing and one Nylon Washer from the Spinner Axle.

### Step 2

Slide Spinner Assembly onto the Spinner Axle and replace the Nylon Washer and Bushing.

### Step 3

Slide Spinner Axle through the hole in the Hub.

### Step 4

Slide the Cotter Pin through the hole in the Spinner Axle and bend the ends outward to secure in place.

### Step 5

Connect Upper Support Pole with Lower Support Pole and insert into the ground.

**PLEASE NOTE:** *It is recommended that you take your Petite Spinner inside during storms and harsh weather to preserve its durability.*