



PREMIER KITES
1004 Findlay Street
Portsmouth, Ohio 45662 USA

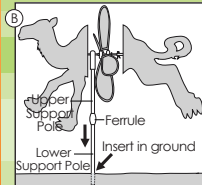

0-5

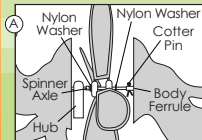

1. Remove Cotter Pin and one Nylon Washer from Spinner Axle.
2. Slide on Spinner Wings and Nylon Washer.
3. Install Rear Body Ferrule and secure with Cotter Pin.
4. Slide narrow tip of Upper Support Pole into Hub and firmly push until it locks into place.
5. Connect Upper Support Pole with Lower Support Pole and stick spinner in ground.

Compatible with Premier's 6 mm Deck Mount (sold separately).

5+

PLEASE NOTE: It is recommended that you take your Spinner inside during storms and harsh weather to preserve its durability.