

# Assembly Instructions

## Step 1

Remove Cotter Pin and slide Bushing and one Nylon Washer from the Spinner Axle.

## Step 2

Slide Spinner Assembly onto the Spinner Axle and replace the Nylon Washer and Bushing.

## Step 3

Slide Spinner Axle through the hole in the Hub.

## Step 4

Slide the Cotter Pin through the hole in the Spinner Axle and bend the ends outward to secure in place.

## Step 5

Connect Upper Support Pole with Lower Support Pole and insert into the ground.

Compatible with Premier's 6 mm Deck Mount (sold separately).

