


Large Triple Spinner Instructions

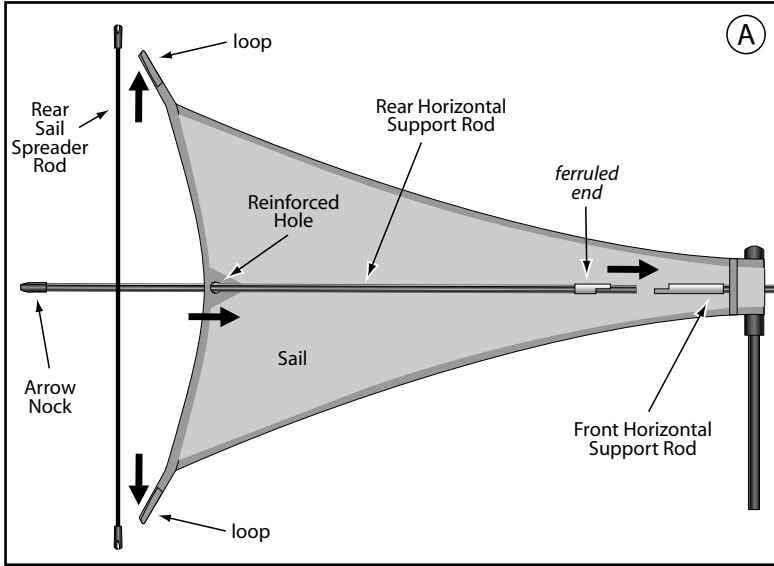


Step 1:

Hook ends of Rear Sail Spreader Rod into loops at rear edges of Sail. (diagram A)

Step 2:



Slide ferruled end of Rear Horizontal Support Rod through Reinforced Hole at rear of Sail and fit into ferrule at rear of Front Horizontal Support Rod. (diagram A) Hook Arrow Nock on rear end of Rear Horizontal Support Rod onto Rear Sail Spreader Rod. Rear Sail Spreader Rod should snap securely into Arrow Nock. (diagram B)

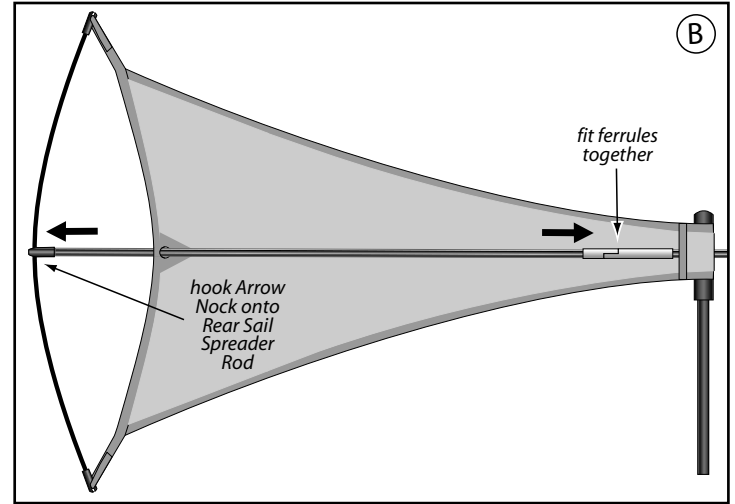

Step 3:

Slide Spinner onto Front Horizontal Support Rod up to Fixed Stopper. Slide Stopper onto Front Horizontal Support Rod and align with mark closest to Spinner. Tighten into place with enclosed small Allen Wrench. Repeat for second and third Spinners. After assembling Spinners insert End Cap over front end of Front Horizontal Support Rod. (diagram C)

NOTE: A small gap of about 1/16" should exist between Spinner and Stoppers to each side. Attaching Spinner flush against Stoppers may impede Spinner's ability to spin.

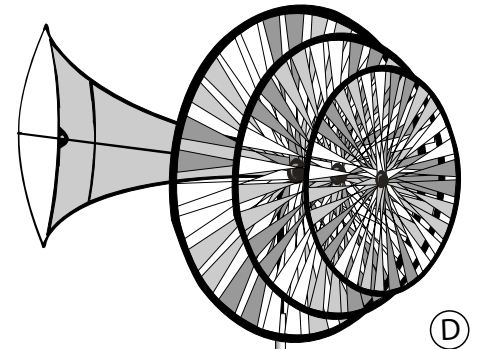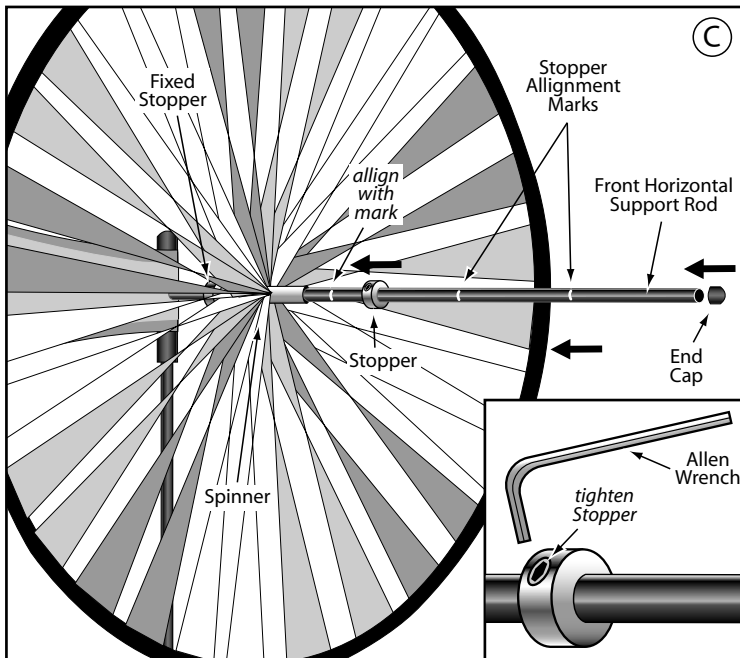

Step 5:

Pound Ground Stake into ground and insert non-ferruled end of Mast Pole Section. Insert non-ferruled end of second Mast Pole Section into ferrule on top of first Mast Pole Section. Insert bottom of Mast Segment of completed Large Triple Spinner into ferrule on top of second Mast Pole Section. (diagram D)

CAUTION: To prolong life of Triple Spinner, never leave out in storms, bad weather, or in winds of over 20mph.

