
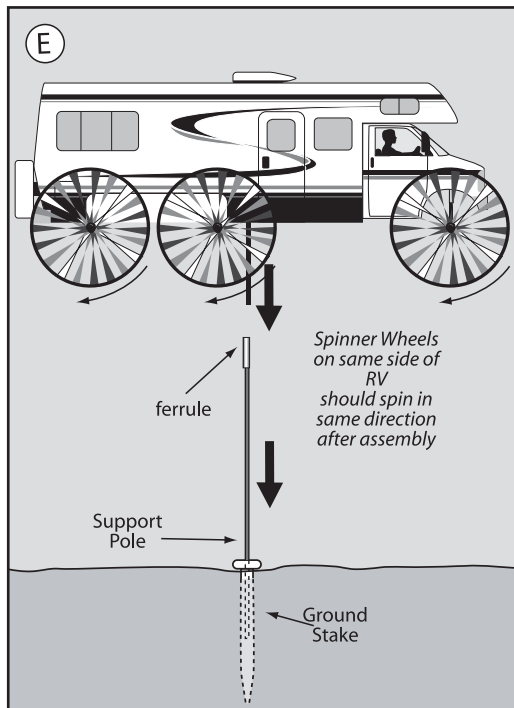
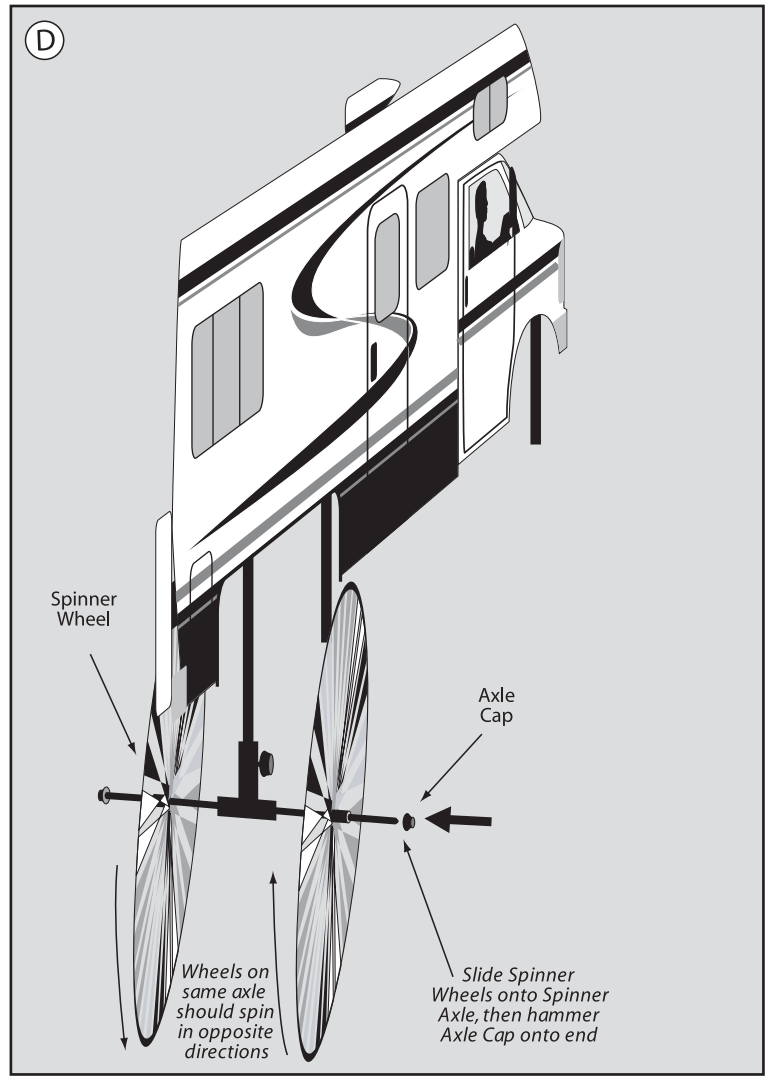


Step 1

The Strut Assembly of your RV spinner is shipped in three sections. Connect Center Rods of the Rear Strut Assembly and the Front Strut Assembly to the Center Rod of the Center Strut Assembly as shown. (diagram A)

Step 2

Open Velcro straps and insert completed Strut Assembly into bottom of RV Body Sleeve as shown. Make sure all internal struts connect to the Strut Assembly. Reclose Velcro straps. (diagram B)

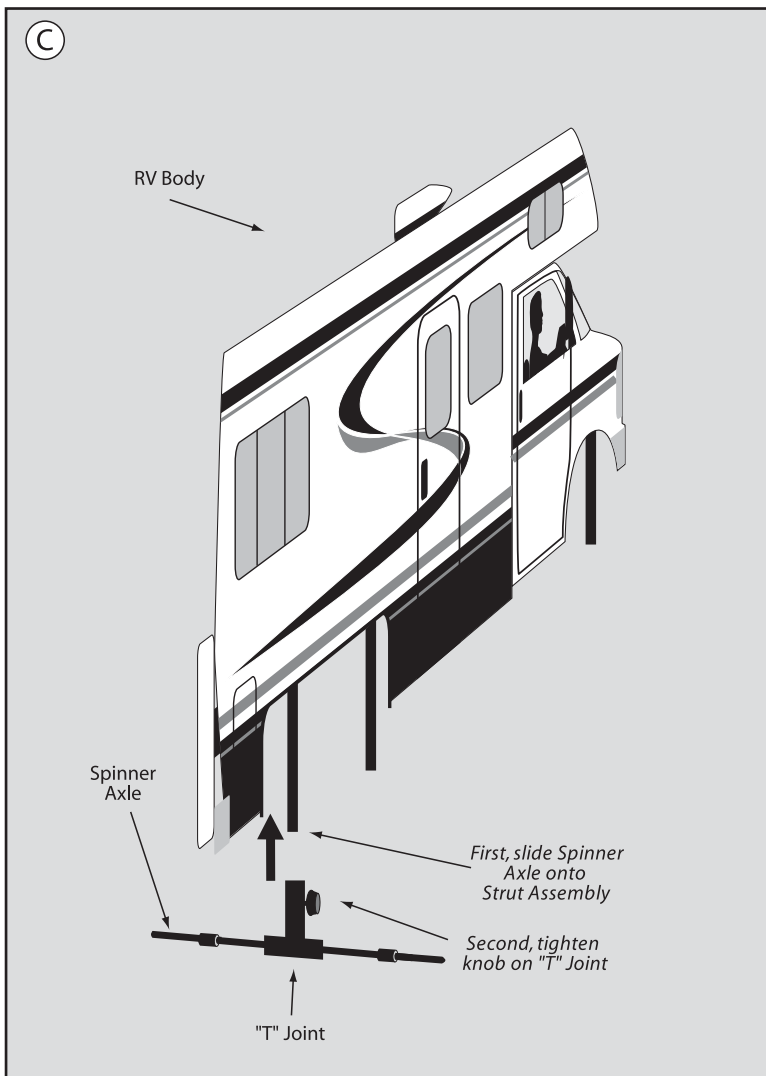

Step 3

Take one of the Spinner Axles and slide it onto the Rear Strut Assembly at back of RV Body. Tighten the knob on the "T" Joint to hold the Axles to the Struts. (diagram C)

Step 4

Take one of the six Spinner Wheels and slide it onto one of the two Spinner Axles. Slide second Spinner Wheel onto Spinner Axle. **(Note: Spinner Wheels on same side of RV should spin in same direction and Spinner Wheels on same axle should spin in opposite directions. Before putting second Axle Cap into place, make sure wheels spin as shown in diagrams D and E.)** Pound second Axle Cap onto uncapped end of Spinner Axle using a mallet or piece of wood. (diagram D)

Step 5

Repeat Step 4 using the remaining Spinner Axles and the four remaining Spinner Wheels to assemble the middle and front Spinners.

Step 6

Pound Ground Stake into ground and insert non-ferruled end of Support Pole into Ground Stake. Insert Upper Pole Section of completed RV Spinner into ferrule on top of Support Pole. (diagram E)

PLEASE NOTE: Although your RV Spinner is constructed with UV resistant SolarMax™ fabric, it is recommended that you take it inside during storms and harsh weather to preserve its durability.