

## #26911 37" CHOPPER SPINNER ASSEMBLY INSTRUCTIONS

1. The Strut Assembly of your Chopper Spinner is shipped in two sections. Connect Main Strut Assembly and Upper Strut Assembly by joining the Hub on the Upper Strut Assembly to the Main Vertical Strut of the Main Strut Assembly as shown. Open all velcro straps on the Chopper Body Sleeve. Slide the completed Strut Assembly into bottom of Chopper Body Sleeve. Reclose all velcro straps. (Diagram A)
2. Slide one of the Axles onto the Rear Axle Fitting. The Axle can point either to the right or left but not to the top or bottom since this is where the Wheel will sit. Screw the threaded Axle Lock Nut onto the Rear Axle Fitting and tighten. Repeat with the Front Axle fitting making sure the Axle is pointed the same direction as the Rear Axle. (Diagram B)
3. Slide the small Wheel onto the Front Axle and slide the large Wheel onto the Rear Axle and tap the Axle Caps onto the ends of the Axles using a mallet or a piece of wood. (Diagram C)
3. Drive Ground Stake into ground. Slide Support Pole into Ground Stake. Insert Upper Pole Section of completed Chopper Spinner into ferrule on top of Support Pole. (Diagram D)

**PLEASE NOTE: Although your Garden Spinner is constructed with UV resistant SunTex™ fabric, to preserve its durability, we recommend taking the Spinner inside during harsh weather or when not in use.**

