


# SQUEAKY THE OCTOPUS

assembly instructions

Attach the flying line to the tow point found at the bottom of the bridle line.

Kite is now ready to fly.

Since wind conditions will vary, a slight adjustment in the location of the tow loop may improve the flying characteristics of the kite. Simply loosen the knot and move the loop half an inch up for high wind or half an inch down for lower wind conditions.

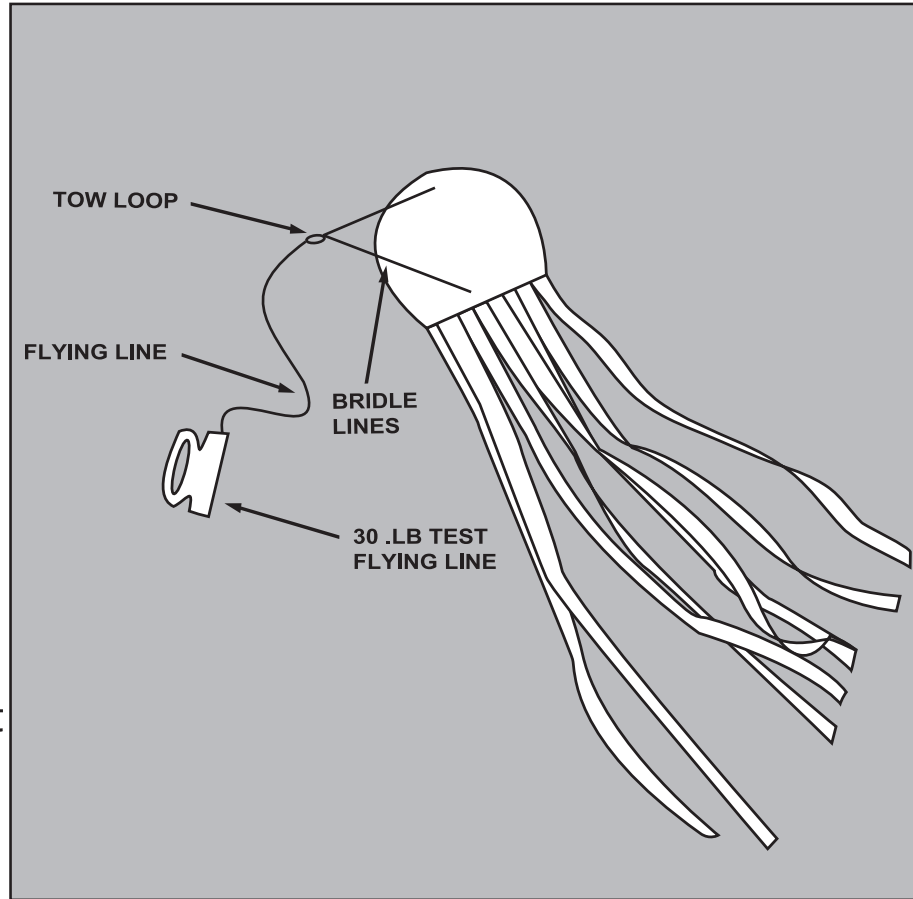

## FLIGHT INSTRUCTIONS:

- Attach flying line to Tow Loop.
- Have a friend stand about 50 ft. downwind from you and hold the kite with its Leading Edge pointed towards the sky.
- As the wind catches the kite, signal your friend to release it while you bring in the line with long steady pulls.
- Slowly let out more line as the kite flies upward.

## OPTIMUM WIND CONDITIONS FOR SQUEAKY THE OCTOPUS

BEAUFORT SCALE	CALM	LIGHT AIR	LIGHT BREEZE	GENTLE BREEZE	MODERATE BREEZE	FRESH BREEZE	STRONG BREEZE
[M.P.H.]	0	1 2 3	4 5 6 7	8 9 10 11 12	13 14 15 16 17 18	19 20 21 22 23 24	25 26 27 28 29 30
WIND	Smoke vertically	Direction of wind shown by smoke, but not by wind vanes	Wind felt on face, leaves rustle, ordinary vane moves	Leaves and small twigs in constant motion; wind extends light flag	Raises dust and loose paper; small branches move	Small trees & leaves begin to sway; crested wavelets form on inland water	Large branches in motion; utility wire whistle; windows rattle
				<b>Squeaky the Octopus</b>			

Note: Wind conditions aloft may vary considerably from those found near ground level.