

Step 1

Remove your Car Spinner from the package and unfold the fabric Body . Open the Velcro seam along the bottom of the Car and slide the Body Rod into the head of the fabric Body and firmly insert the bottom of the Body Rod into the top of the Starlock Hub.

Step 2

Slide the narrow, plastic tipped end of the Support Pole into Star Lock Hub. Push down on the hub until The Support Pole locks into place and can not be removed. Close Velcro Seam. Completed internal Strut Assembly should match Diagram A.

Step 3


Slide the Spinner Axles onto the Wheel Strut Assemblies. Tighten knobs on the "T" Joints to hold the Axles to the Struts. (Diagram B)

Step 4

Take one of the four Spinner Wheels and slide it onto one of the two Spinner Axles. Slide second Spinner Wheel onto Spinner Axle. **(Note: Spinner Wheels on same side of Car should spin in same direction and Spinner Wheels on same axle should spin in opposite directions. Before putting second Axle Cap into place, make sure wheels spin as shown in diagrams C and D.)** Pound second Axle Cap onto uncapped end of Spinner Axle using a mallet or piece of wood. (Diagram C)

Step 5

Drive Ground Stake into ground. Slide assembled Car Spinner into Ground Stake. (Diagram D)

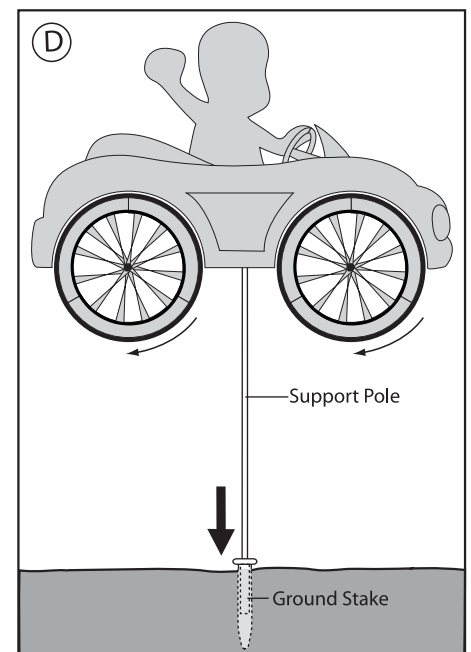

PLEASE NOTE: It is recommended that you take your Car Spinner inside during storms and harsh weather to preserve its durability.