


FOUR WING BOX KITE assembly instructions

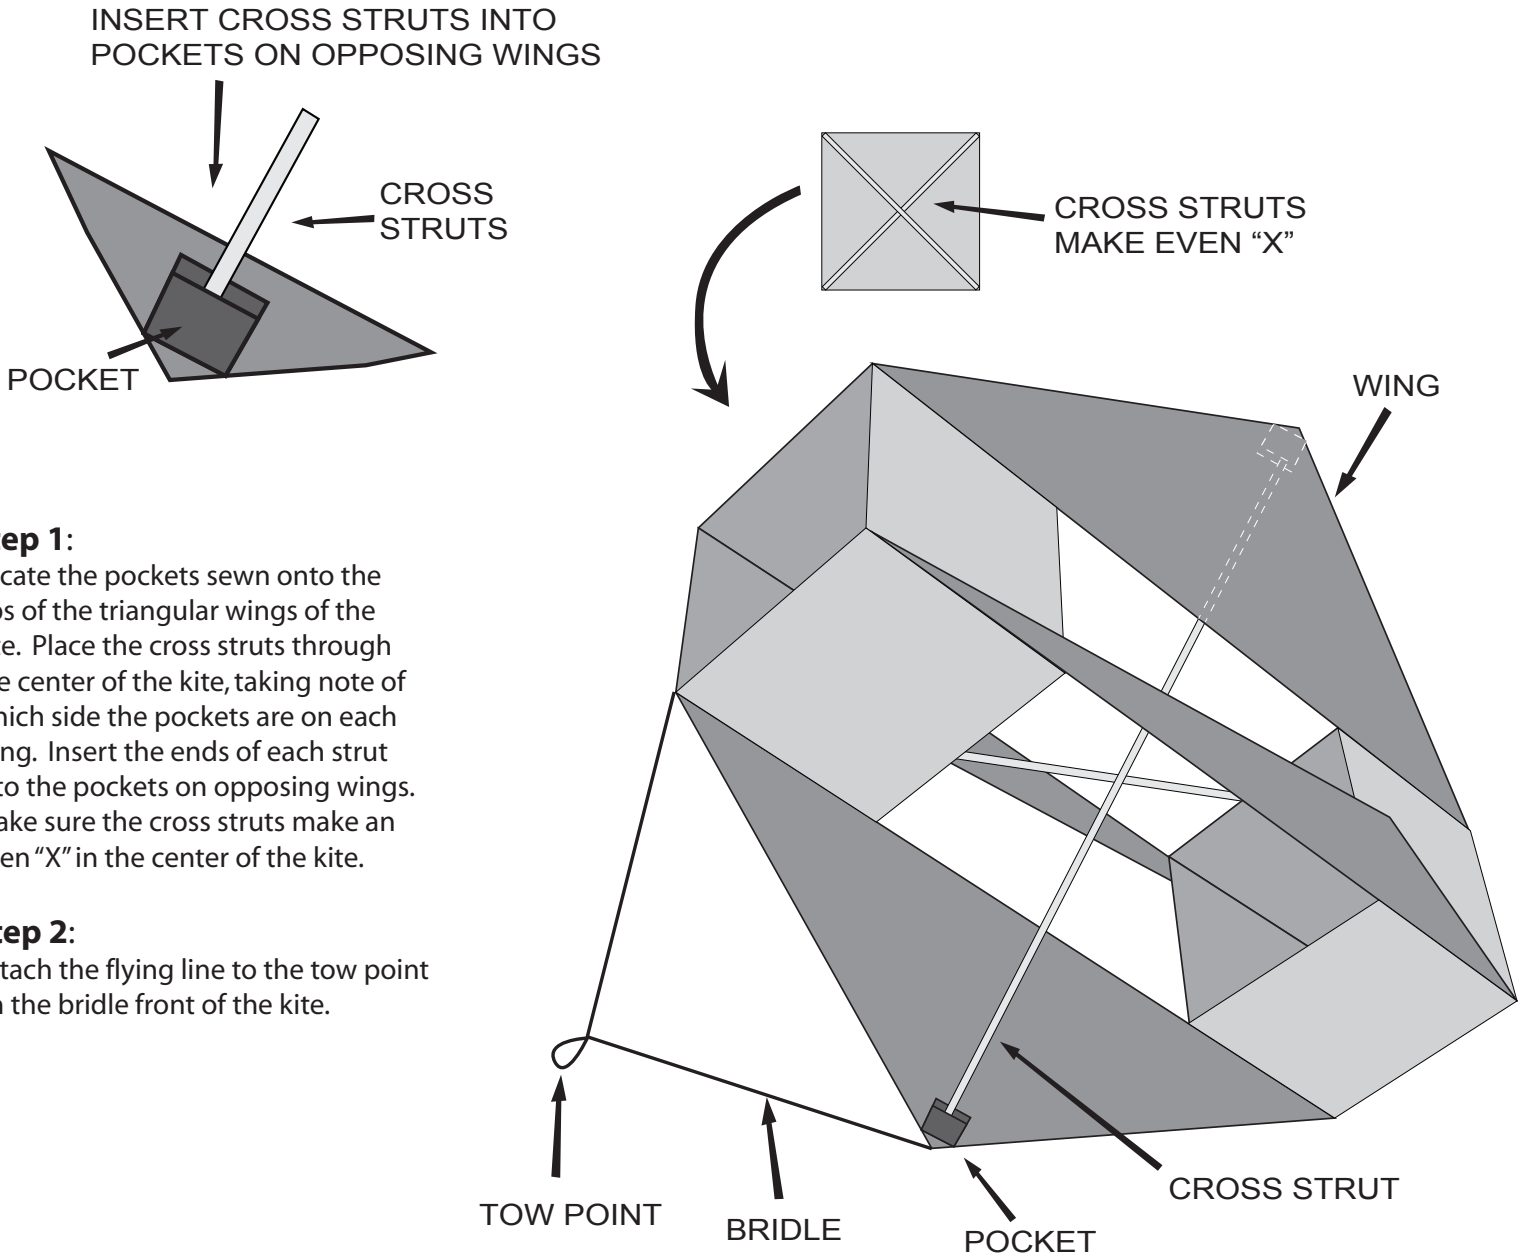

Step 1:

Locate the pockets sewn onto the tips of the triangular wings of the kite. Place the cross struts through the center of the kite, taking note of which side the pockets are on each wing. Insert the ends of each strut into the pockets on opposing wings. Make sure the cross struts make an even "X" in the center of the kite.

Step 2:

Attach the flying line to the tow point on the bridle front of the kite.

To Fly: Have a friend stand about 75 feet downwind from you and hold the kite with its nose pointed towards the sky. As the wind catches the kite, signal your friend to release it while you steadily pull in line until the kite is aloft. As the kite flies upward, slowly release more line.

OPTIMUM WIND CONDITIONS FOR FOUR WING BOX KITE RECOMMENDED LINE: 30 LB TEST LINE

BEAUFORT SCALE	CALM	LIGHT AIR	LIGHT BREEZE	GENTLE BREEZE	MODERATE BREEZE	FRESH BREEZE	STRONG BREEZE
	smoke rises vertically	Direction of wind shown by smoke, but not by wind vanes	Wind felt on face, leaves rustle, ordinary vane moves	Leaves and small twigs in constant motion; wind extends light flag	Raises dust and loose paper; small branches move	Small trees & leaves begin to sway; crested wavelets form on inland water	Large branches in motion; utility wire whistles; windows rattle
WIND [M.P.H.]	0	1 2 3	4 5 6 7	8 9 10 11 12	13 14 15 16 17 18	19 20 21 22 23 24	25 26 27 28 29 30
FOUR WING BOX KITE							

Note: Wind conditions aloft may vary considerably from those found near ground level.