



Ram Air Cat *attachment instructions*

- Step 1:** Tie off the kite, or have someone hold the line for you, while you walk several yards towards the lifter kite. (diagram A)
- Step 2:** Attach the line that connects to the head to the flying line. (diagram A)

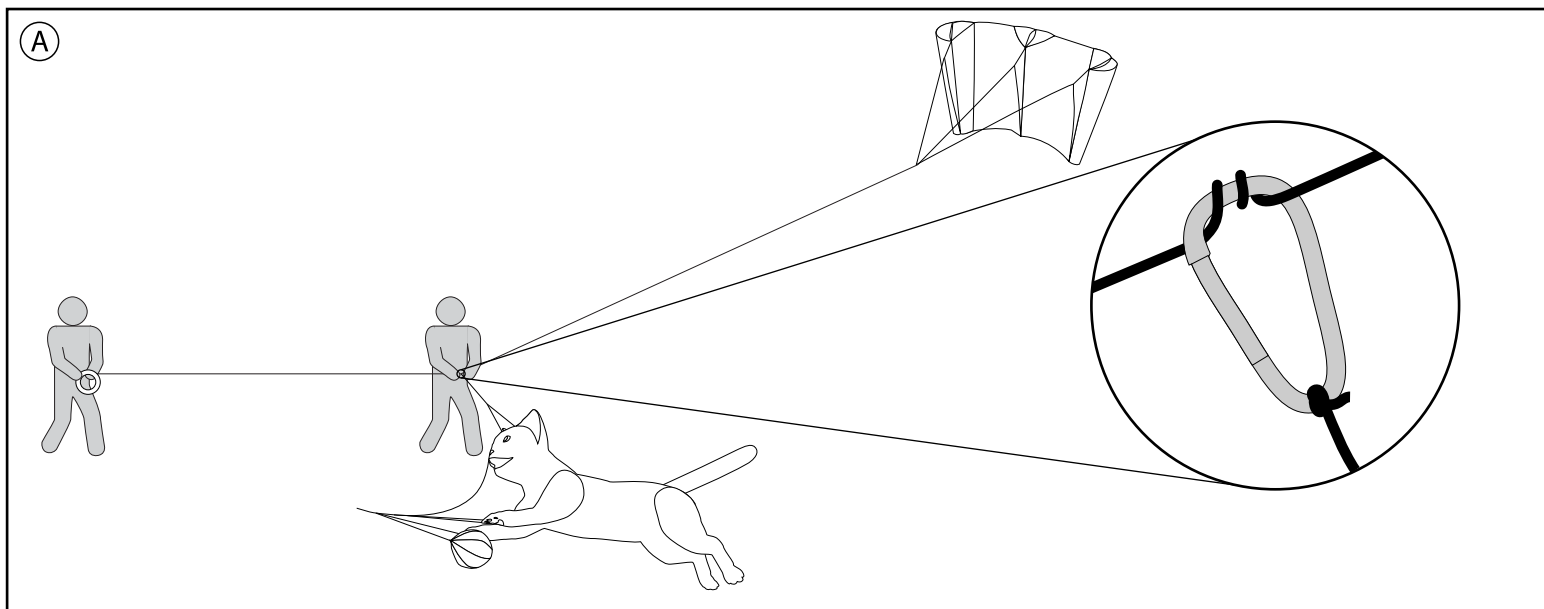


- Step 3:** Walk back about 6 feet towards the winder and attach the line that connects to the mouth and paws to the flying line. (diagram B)

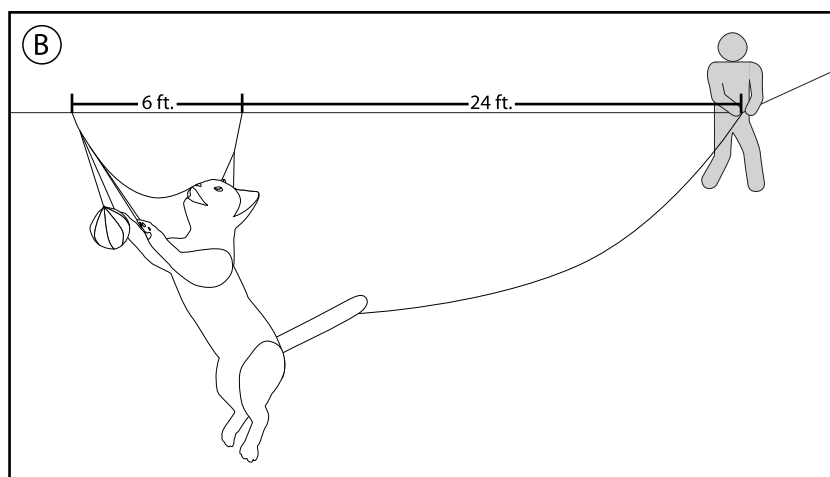

- Step 4:** Attach the line that connects to the tail to the flying line. Tail connection should be about 24 feet behind the Head connection. (diagram B)

- Step 5:** Release the flying line of the lifter kite. (Diagram C)

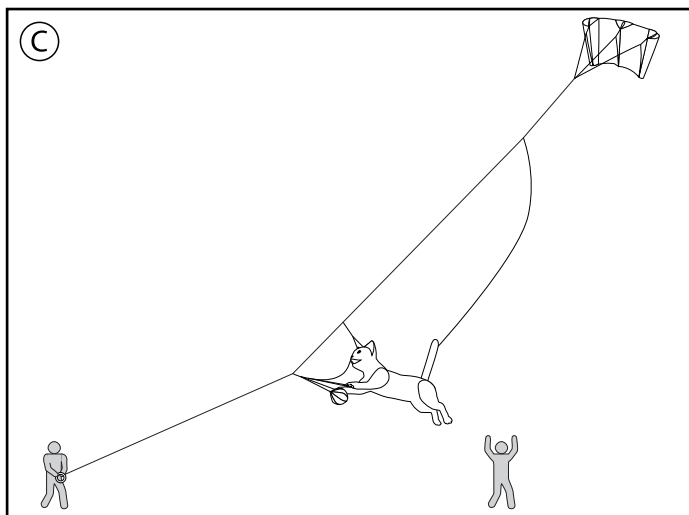

Flying Tips:

Please note due to variable wind conditions and lifter kite flying angles the three Ram Air Cat attachment points may vary from the measurements above. After launch watch your Cat and make final adjustments if necessary. The Cat's tail should be almost straight up from the body with front paws fully outstretched in front like the real animal. Please note if the ball's bridle lines become tangled, simply untie, untangle and reattach.