



PREMIER 56" ROKKAKU ASSEMBLY INSTRUCTIONS

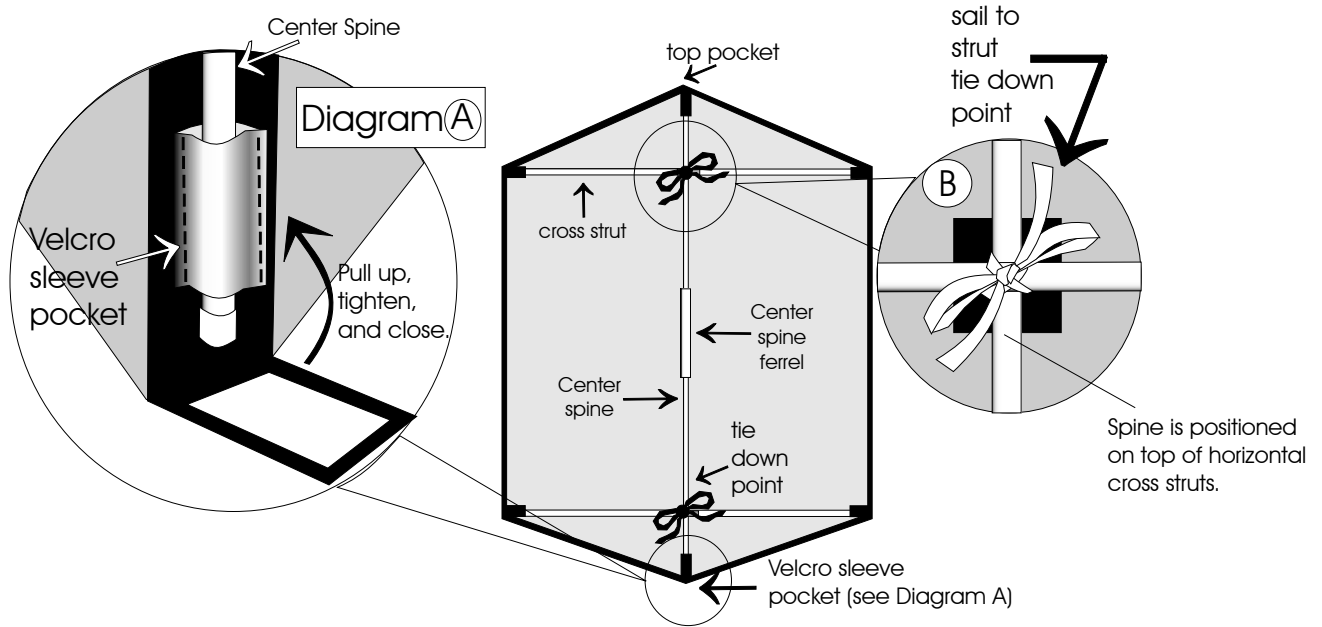

1. Join center spine together at ferrel. Slide center spine through bottom velcro sleeve pocket, then insert top of spine into top pocket and finally close velcro spine pocket. Velcro pocket should be pulled up tight to tension sail. (Diagram A)
2. Tie struts to sail at tie down points. (Diagram B)

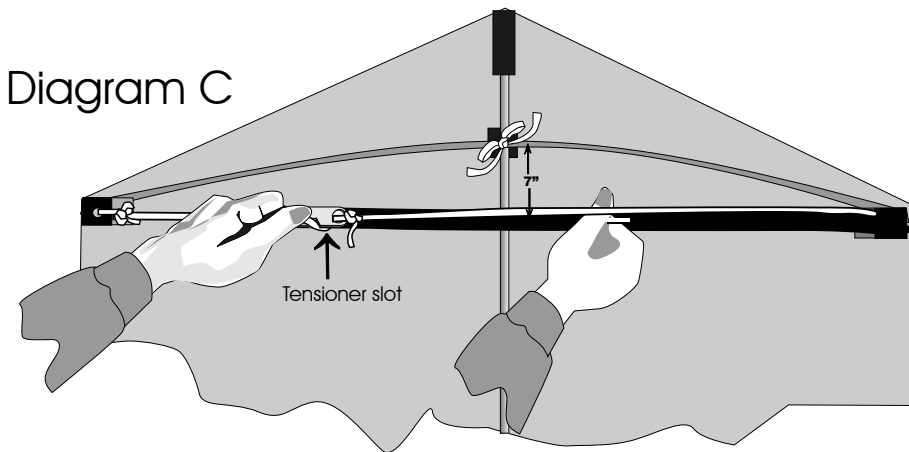

3. Before flying, cross struts must be bowed approximately 7" by tensioning the Bow Strings.

To Tension:

Hold the tensioner with the left hand and pull the line through the tensioner with your right hand as shown on the diagram until the kite starts to bow. Bow distance should be about 7". Once in place, make sure line is "locked" into tensioner slot.

To De-Tension:

Hold the tensioner with your left hand and one of the lines on the right side of the kite with your right hand and simply slide the tensioner back until the bow starts to go straight and the bow line go slack.

FLIGHT INSTRUCTIONS

Tie the end of the flying line to the bridle tow loop. Have a friend stand about 75 ft downwind from you and hold the kite with its nose pointed towards the sky. As the wind catches the kite, signal your friend to release it while you bring in the line with long steady pulls. As the kite flies upward, slowly let out more line.

