


Hot Air Balloon 16" Spinner

assembly
instructions

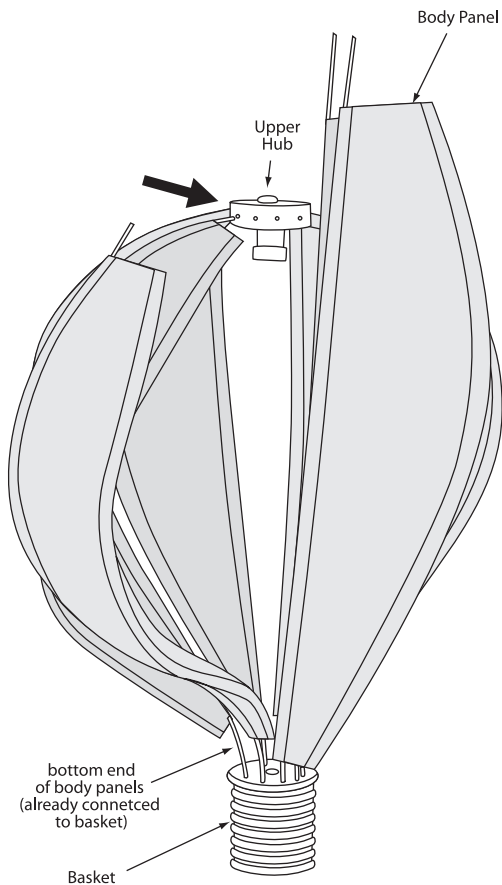

Hot Air Balloon Assembly Instructions:

- Your 16" Hot Air Balloon comes partially assembled with the 6 body panels already connected to the lower wooden basket.
- Begin assembly by inserting fiberglass rods of the body panels one at a time into the small holes in the upper hub. When inserting the rods it is important to make sure they go all the way to the bottom of the hole.
- Work your way with the fiberglass rods around the hub making sure that no holes are skipped or body panels crisscrossed.
- Once all the fiberglass rods are in the hub, push the panels upward so they all neatly touch the hub.

