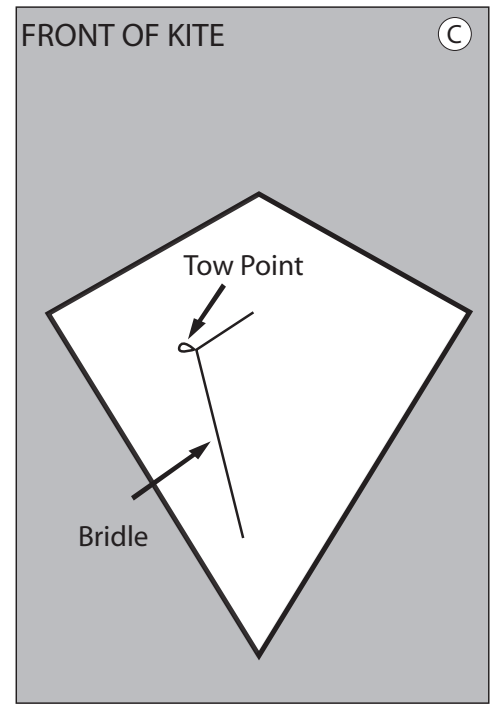
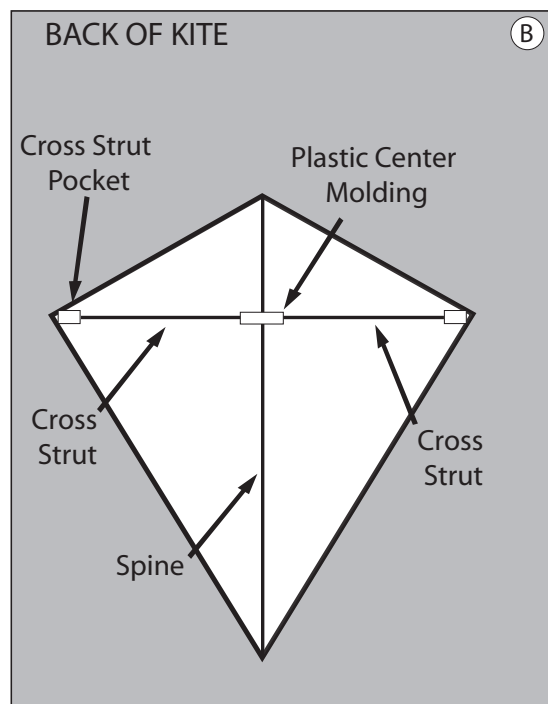
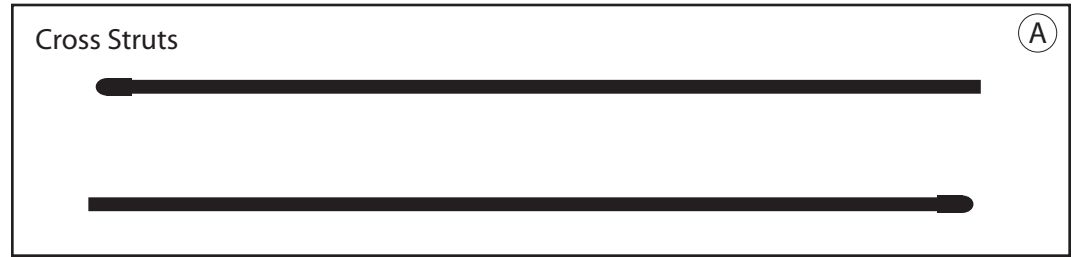


# 30 INCH DIAMOND

assembly instructions


**Step 1:**  
Unroll Kite.**Step 2:**  
Identify and organize struts**Step 3:**  
Insert the Cross Strut into the Cross Strut Pockets on both sides of the kite.**Step 4:**  
Slide the struts into the Plastic Center Molding.**Step 5:**  
Attach the flying line to the Tow Point on the Bridle on the front of the kite.

Your kite is now ready to fly!

**FLIGHT INSTRUCTIONS:**

- Attach flying line to Tow Loop.
- Have a friend stand about 75 ft. downwind from you and hold the kite with its Leading Edge pointed towards the sky.
- As the wind catches the kite, signal your friend to release it while you bring in the line with long steady pulls.
- Slowly let out more line as the kite flies upward.

RECOMMENDED LINE: 20 LB TEST LINE

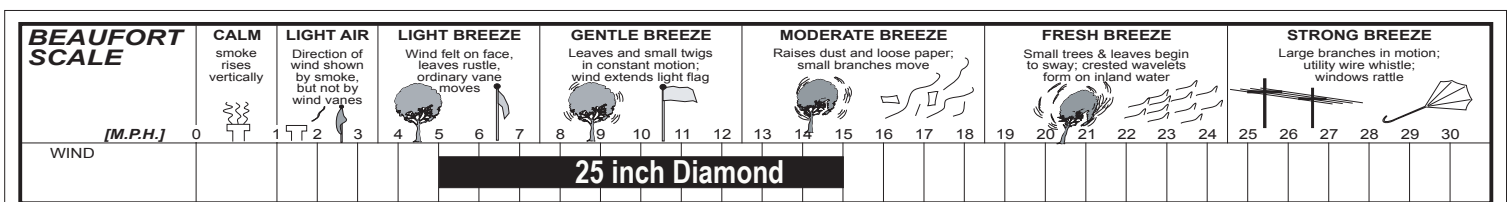**OPTIMUM WIND CONDITIONS FOR 30 INCH DIAMOND**

Note: Wind conditions aloft may vary considerably from those found near ground level.