


3-D Dragon

assembly instructions

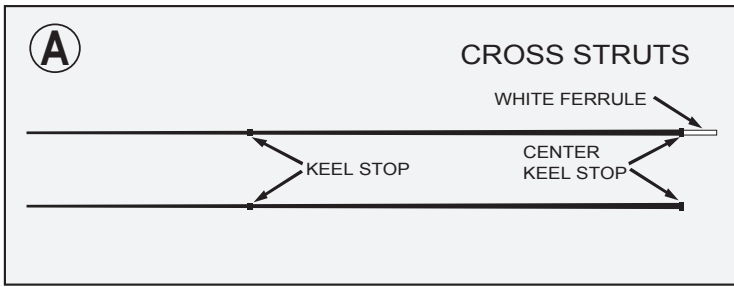


open your new kite:

- Remove rubber bands from bundled kite and struts. Group the struts according to Diagram A.
- Unroll kite and spread it out with the plastic coated side of the head facing up.

head assembly:



- Insert Jaw Strut into Black Spine Fitting. Then insert Side Head Struts into Clear Spine Tube. (Diagram B)

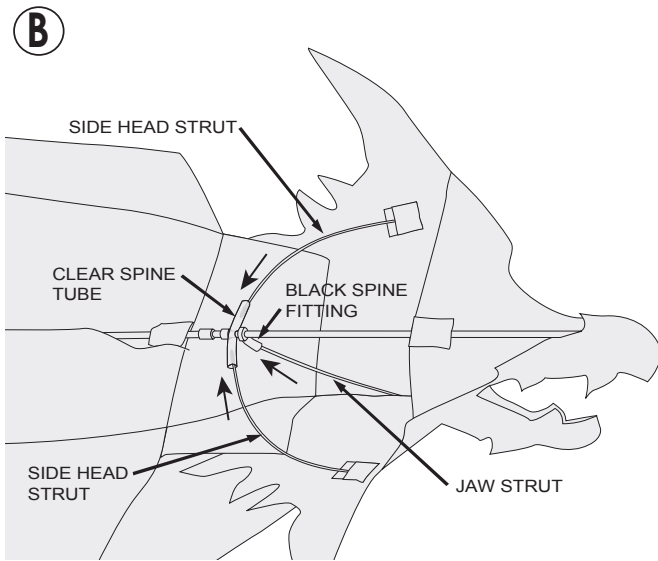


cross strut assembly:

- Flip the kite around so that the Wing Keels are facing up.
- Make sure the Bridle Loop is pulled through the body. (Diagram C)
- Take the thin end of a Cross Strut and insert it through one of the Outboard Keel Loops. Carefully jump the Outboard Keel Loop over the first Keel Stop so that the Outboard Keel Loop is on the side of the Keel Stop that is nearest to the Dragon Body. (Diagram C)
- Repeat on the other side.



C

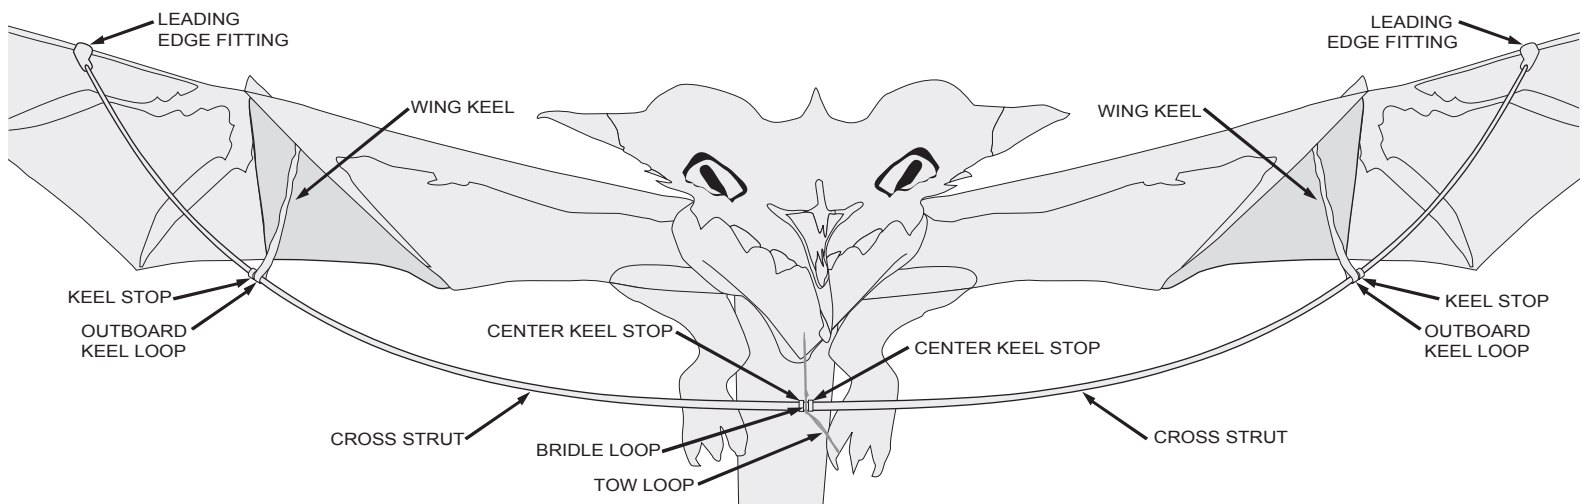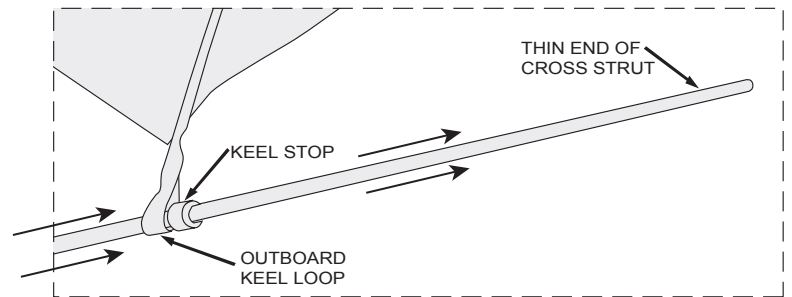

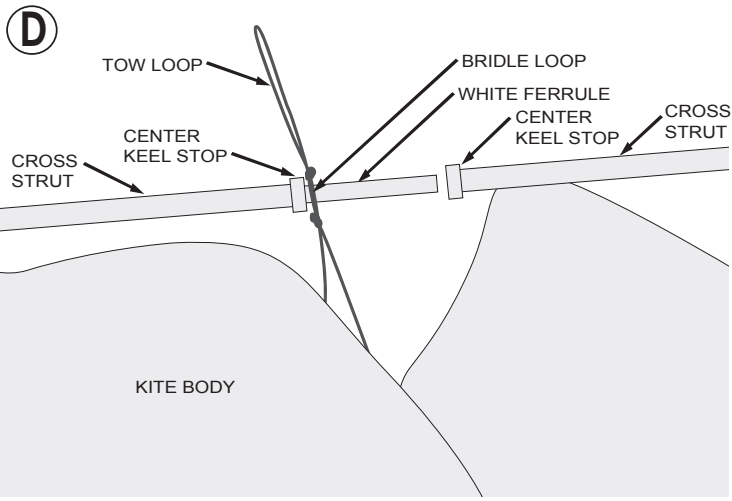

cross strut assembly (cont.):

- Insert the White Ferrule into the Small Middle Loop on the Bridle. Insert the other side of the Cross Strut over the Ferrule. Close the Gap in the Ferrule so that the Small Bridge Loop is sandwiched between the two Center Keel Stops. (Diagram D)
- Insert the thin part of one Cross Strut into the closest Leading Edge Fitting. While gently bowing the Strut, repeat on the other side. (Diagram E)

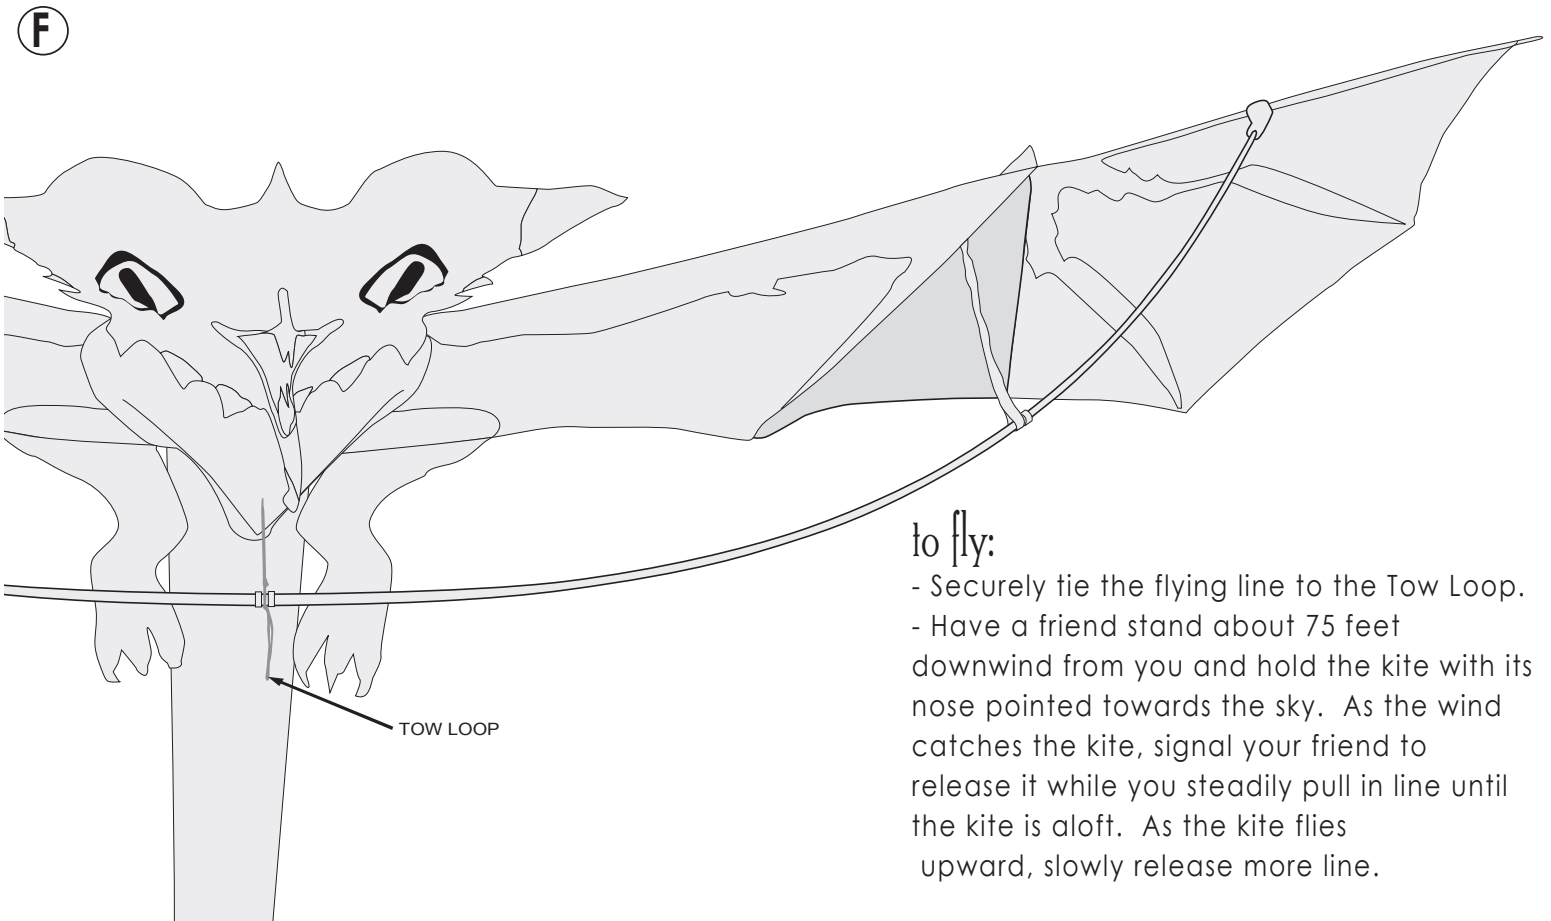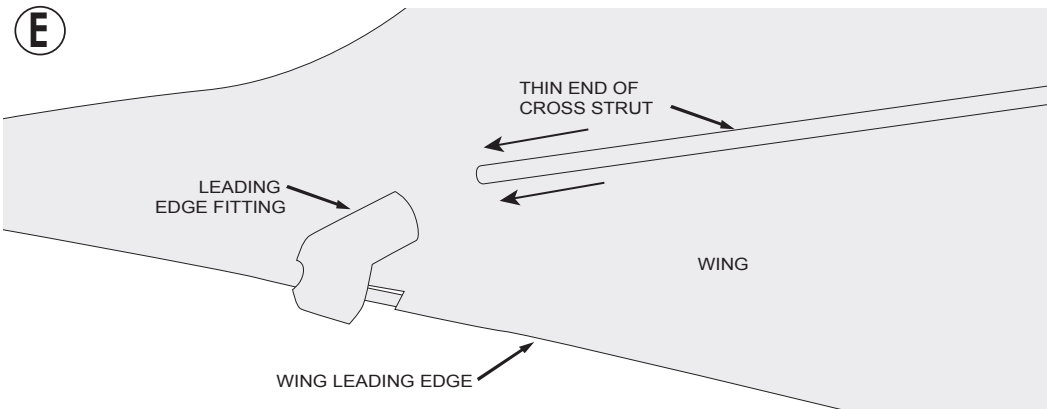

to fly:

- Securely tie the flying line to the Tow Loop.
- Have a friend stand about 75 feet downwind from you and hold the kite with its nose pointed towards the sky. As the wind catches the kite, signal your friend to release it while you steadily pull in line until the kite is aloft. As the kite flies upward, slowly release more line.