


# 11 ft. 3-D Shark *assembly instructions*

get ready:

- Join Head Stiffener Struts at Ferrule.
- Locate the two openings in the Leading Edge. Bend the Head Stiffener and insert into the Leading Edge Pockets. Make sure that the Stiffener is slid fully into the Pockets.
- Join the Spine Strut at the Spine Ferrule. Slide the Spine through the Spine Sleeve and insert the ends of the Spine into the Spine Pockets. The Spine goes in front of the Head Stiffener.
- Insert the Cross Strut into Cross Strut Pockets. The Cross Strut goes in front of the Spine.
- Insert the Tail Stiffener into the Leading Edge Pockets in the Tail Fins.
- Attach the flying line to the tow point on the front of the Bridle.

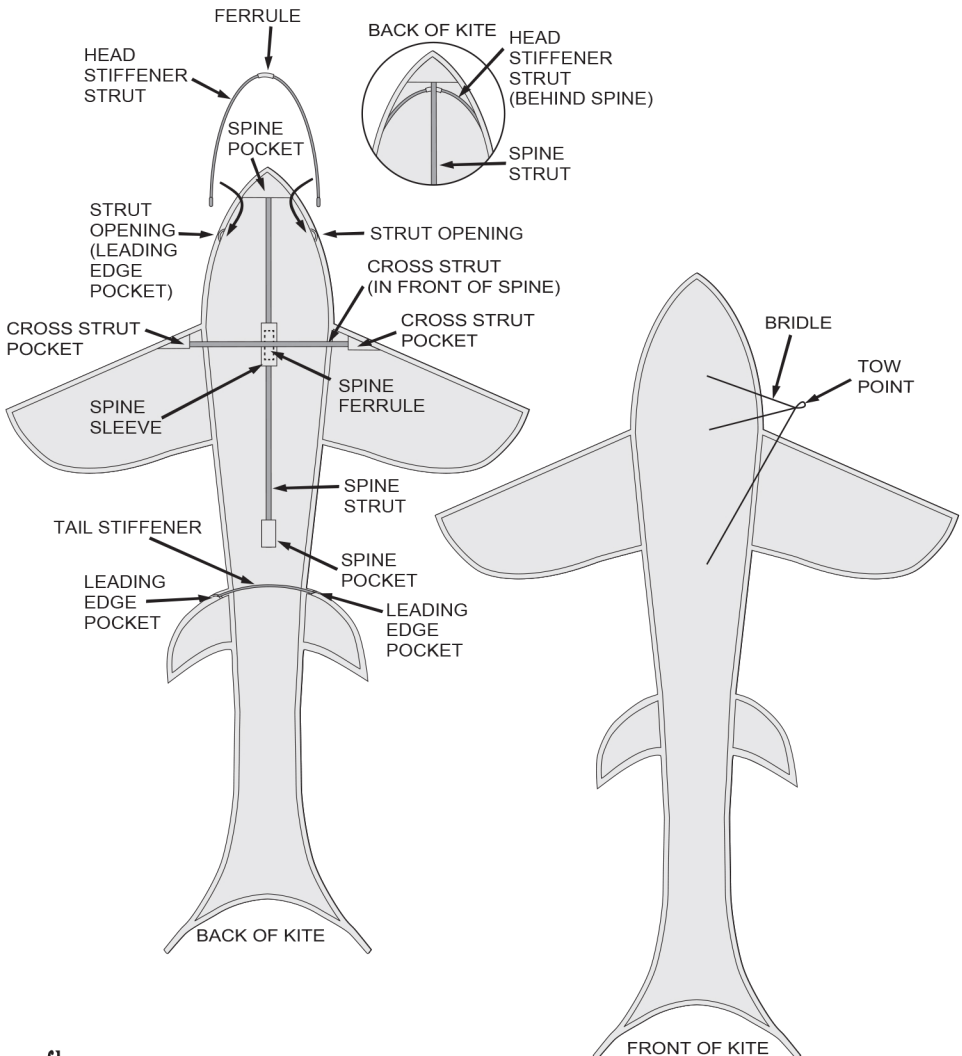

to fly:

Have a friend stand about 75 feet downwind from you and hold the kite with its nose pointed towards the sky. As the wind catches the kite, signal your friend to release it while you steadily pull in line until the kite is aloft. As the kite flies upward, slowly release more line.