
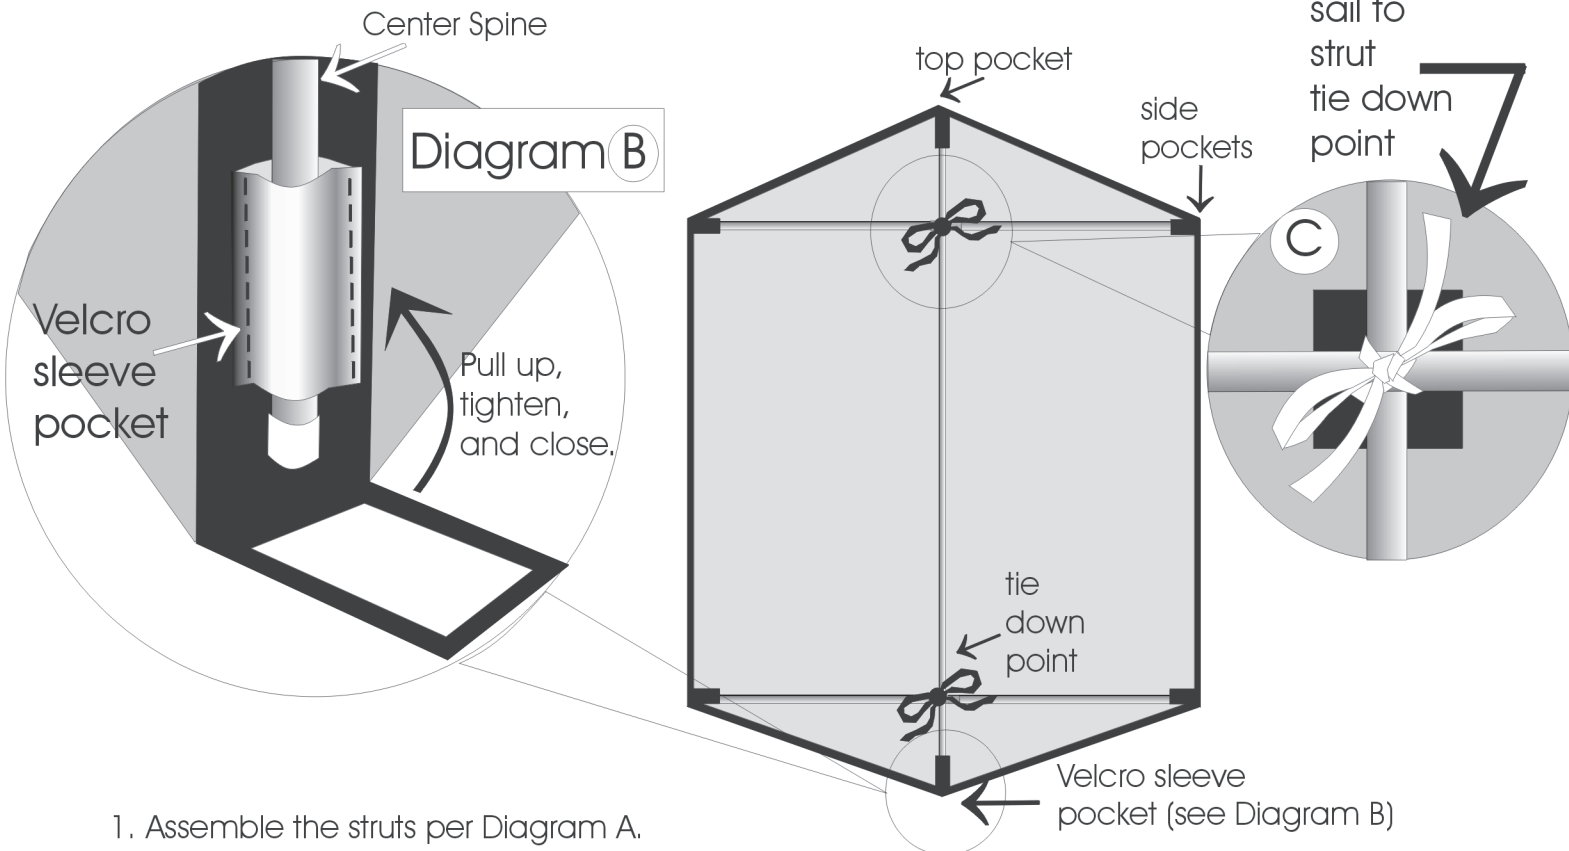


PREMIER 6' ROKKAKU ASSEMBLY INSTRUCTIONS

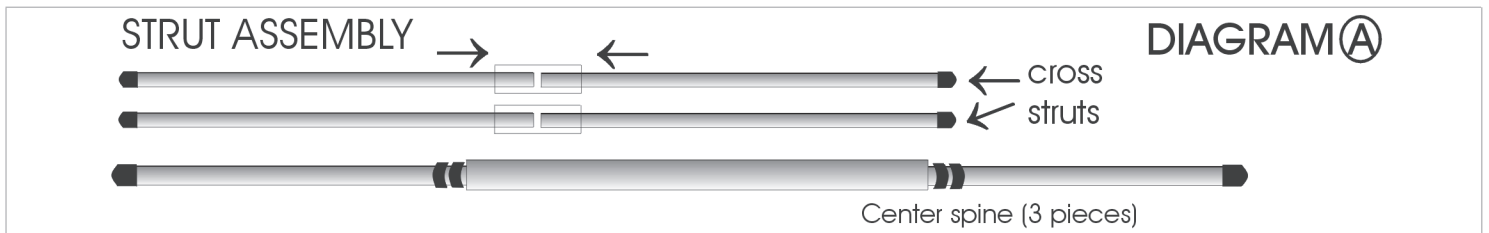

1. Assemble the struts per Diagram A.
2. Insert cross struts into side pockets. Slide center spine through bottom velcro sleeve pocket, then insert top of spine into top pocket and finally close velcro spine pocket. Velcro pocket should be pulled up tight to tension sail. (Diagram B)
3. Tie struts to sail at tiedown points (Diagram C)
4. Before flying, cross struts must be bowed approximately 10" by tensioning the Bow Strings. First, stick thumb of one hand inside the loop of the Bow String while pushing the sleeve forward. At the same time with your other hand, grab the sliding half of the loop and pull backward. When the bow in the cross struts reaches about 10", grab the two halves of the loop together and with your other hand, run your finger and thumb along the sleeve which will lock the Bow String in place. (Diagram D & E) Repeat process to other cross strut making sure both measurements from cross strut to Bow String are 10".

To de-tension, simply run thumb and index finger in reverse along sleeve.

PREMIER 6' ROKKAKU ASSEMBLY INSTRUCTIONS (continued)

