


# BIRDS

assembly instructions

**Step 1:**  
Insert tail struts into the tubing located on the spine and sleeves on the tail.

**Step 2:**  
Insert the cross strut into the plastic dihedral and insert opposite ends into the leading edge fittings.


**Step 3:**  
Attach a line to the tow point on the bridle and you are ready to fly.

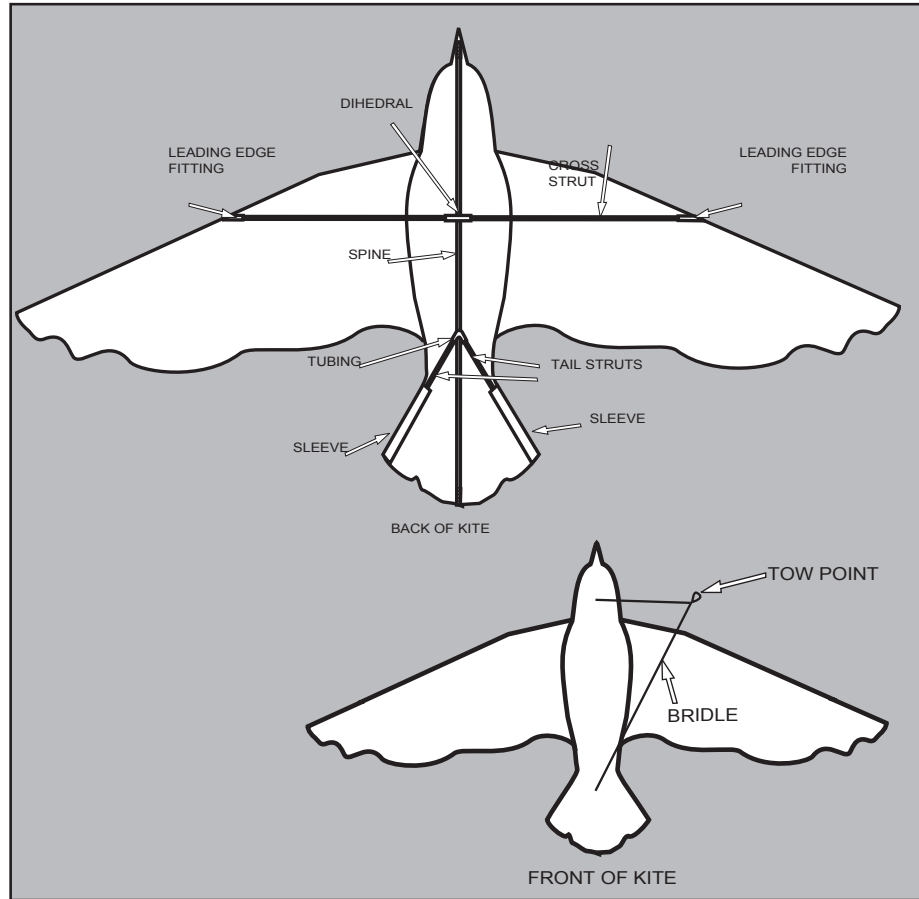

## FLIGHT INSTRUCTIONS:

- Attach flying line to Tow Loop.
- Have a friend stand about 75 ft. downwind from you and hold the kite with its Leading Edge pointed towards the sky.
- As the wind catches the kite, signal your friend to release it while you bring in the line with long steady pulls.
- Slowly let out more line as the kite flies upward.

## OPTIMUM WIND CONDITIONS FOR BIRDS

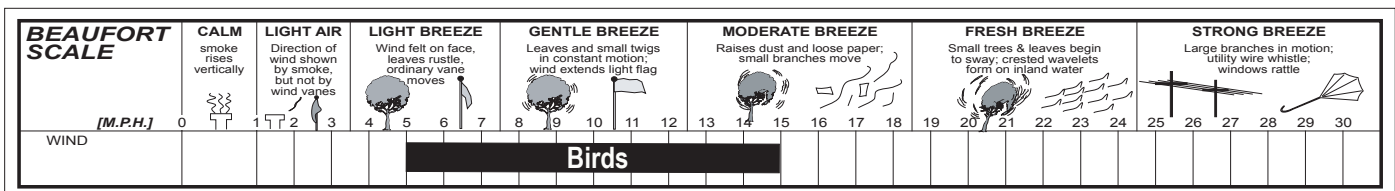

Note: Wind conditions aloft may vary considerably from those found near ground level.