


SIX WING BOX KITE assembly instructions

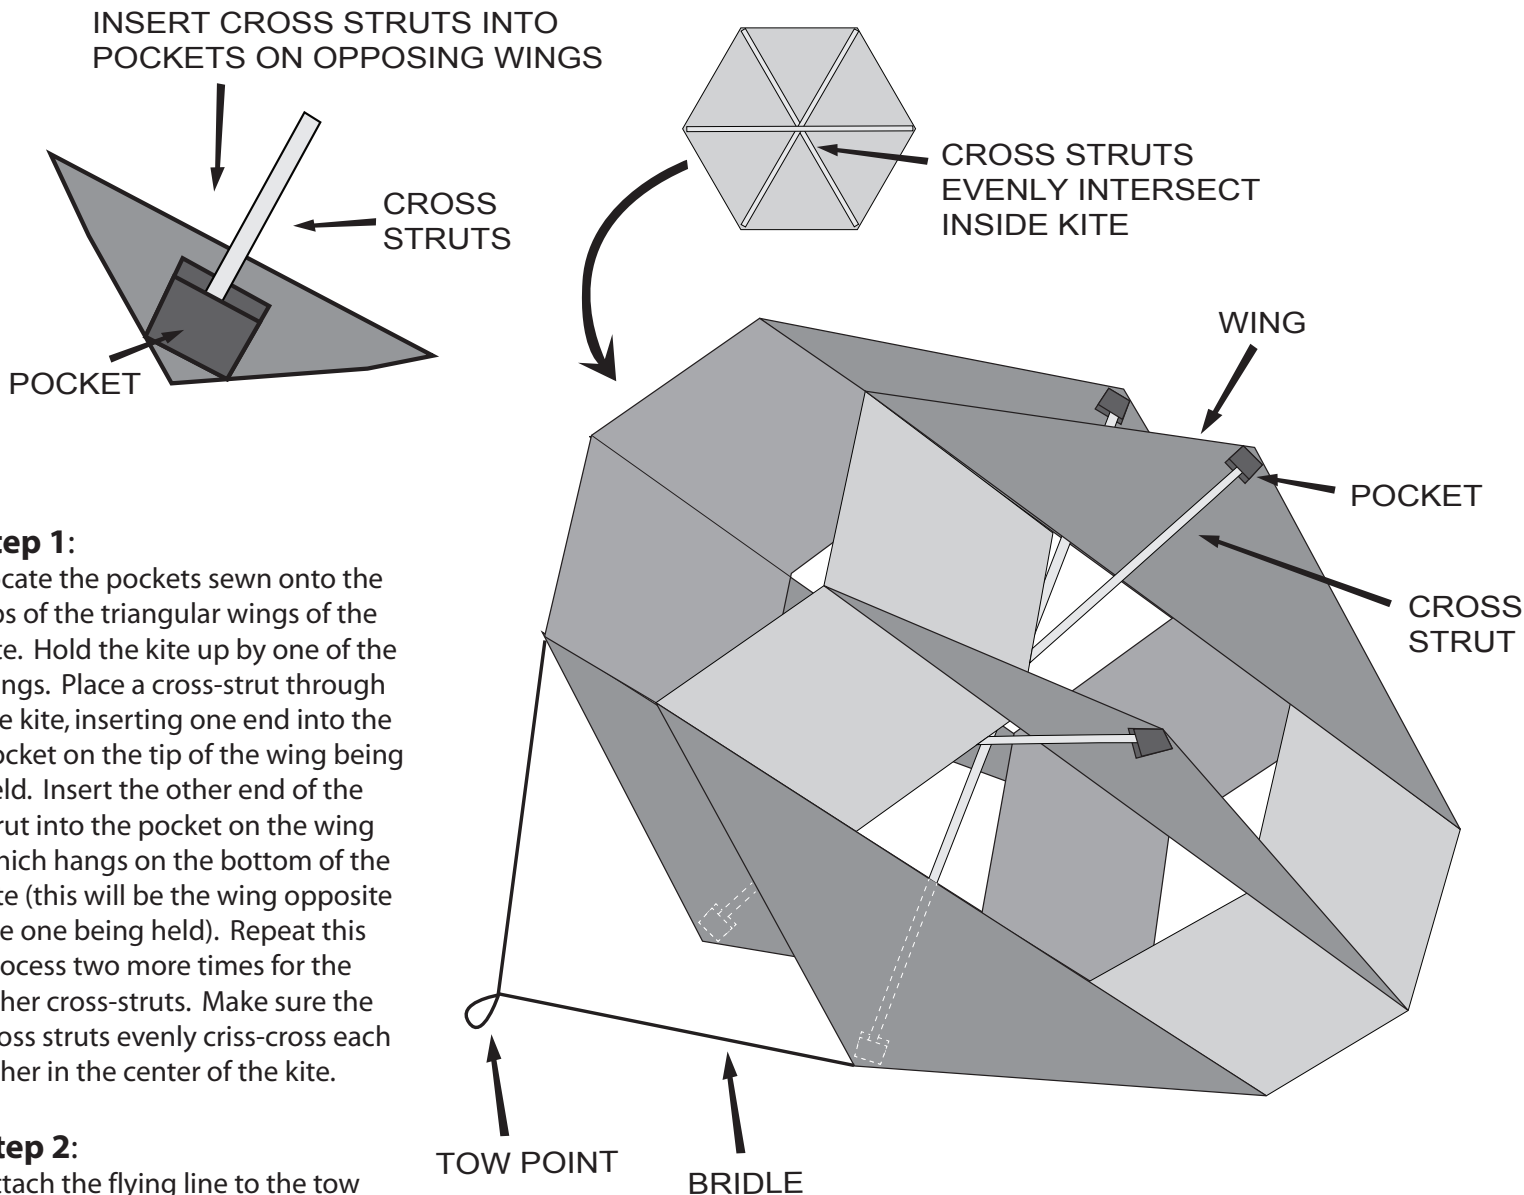

Step 1:
 Locate the pockets sewn onto the tips of the triangular wings of the kite. Hold the kite up by one of the wings. Place a cross-strut through the kite, inserting one end into the pocket on the tip of the wing being held. Insert the other end of the strut into the pocket on the wing which hangs on the bottom of the kite (this will be the wing opposite the one being held). Repeat this process two more times for the other cross-struts. Make sure the cross struts evenly criss-cross each other in the center of the kite.

Step 2:
 Attach the flying line to the tow point on the bridle front of the kite.

To Fly: Have a friend stand about 75 feet downwind from you and hold the kite with its nose pointed towards the sky. As the wind catches the kite, signal your friend to release it while you steadily pull in line until the kite is aloft. As the kite flies upward, slowly release more line.

OPTIMUM WIND CONDITIONS FOR SIX WING BOX KITE

RECOMMENDED LINE: 30 LB TEST LINE

BEAUFORT SCALE	CALM	LIGHT AIR	LIGHT BREEZE	GENTLE BREEZE	MODERATE BREEZE	FRESH BREEZE	STRONG BREEZE																								
WIND [M.P.H.]	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
	smoke rises vertically	Direction of wind shown by smoke, but not by wind vanes	Wind felt on face, leaves rustle, ordinary vane moves	Leaves and small twigs in constant motion; wind extends light flag	Raises dust and loose paper; small branches move	Small trees & leaves begin to sway; crested wavelets form on inland water	Large branches in motion; utility wire whistle; windows rattle																								
SIX WING BOX KITE																															

Note: Wind conditions aloft may vary considerably from those found near ground level.